

Using Avaya Wireless Handset 3735 connected to Avaya Aura[®] Communication Manager and IP Office

© 2020-2023, Avaya LLC All Rights Reserved.

Note

Using a cell, mobile, or GSM phone, or a two-way radio in close proximity to an Avaya DECT handset might cause interference.

Documentation disclaimer

"Documentation" means information published in varying media which may include product information, subscription or service descriptions, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Avaya. End user agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End user.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on Avaya hardware and software. Please refer to your agreement with Avaya to establish the terms of the limited warranty. In addition, Avaya's standard warranty language as well as information regarding support for this product while under warranty is available to Avaya customers and other parties through the Avaya Support website: https://support.avaya.com/helpcenter/getGenericDetails?detailId=C20091120112456651010 under the link "Warranty & Product Lifecycle" or such successor site as designated by Avaya. Please note that if the product(s) was purchased from an authorized Avaya channel partner outside of the United States and Canada, the warranty is provided by said Avaya Channel Partner and not by Avaya.

Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN AVAYA HOSTED SERVICE SUBSCRIPTION FROM AVAYA OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE), THE TERMS OF USE FOR HOSTED SERVICE'S ARE AVAILABLE ON THE AVAYA WEBSITE, HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO UNDER THE LINK "Avaya Terms of Use for Hosted Services" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE. BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

Licenses

The Global Software License Terms ("Software License Terms") are available on the following website https://www.avaya.com/en/legal-license-terms/ or any successor site as designated by Avaya. These Software License Terms are applicable to anyone who installs, downloads, and/or uses Software and/or Documentation. By installing, downloading or using the Software, or authorizing others to do so, the end user agrees that the Software License Terms create a binding contract between them and Avaya. In case the end user is

accepting these Software License Terms on behalf of a company or other legal entity, the end user represents that it has the authority to bind such entity to these Software License Terms.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Avaya. All content on this site, the documentation, Hosted Service, and the product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Unless otherwise stated, each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Avaya Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

Third Party Components

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

Service Provider

WITH RESPECT TO CODECS, IF THE AVAYA CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE H.264 CODEC OR H.265 CODEC, THE AVAYA CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE AVAYA CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPÈG LÁ, L.L.C. SEE HTTP:// WWW.MPEGLA.COM.

Compliance with Laws

You acknowledge and agree that it is Your responsibility to comply with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Avaya product is used.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If You suspect that You are being victimized by Toll Fraud and You need technical assistance or support, please contact your Avaya Sales Representative.

Security Vulnerabilities

Information about Avaya's security support policies can be found in the Security Policies and Support section of https://support.avaya.com/security.

Suspected Avaya product security vulnerabilities are handled per the Avaya Product Security Support Flow (https://support.avaya.com/css/P8/documents/100161515).

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: https://support.avaya.com, or such successor site as designated by Avaya.

Contact Avaya Support

See the Avaya Support website: https://support.avaya.com for Product or Cloud Service notices and articles, or to report a problem with your Avaya Product or Cloud Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: https://support.avaya.com (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

Regulatory Statements

Australia Statements

Handset Magnets Statement:



Danger:

The handset receiver contains magnetic devices that can attract small metallic objects. Care should be taken to avoid personal injury.

Industry Canada (IC) Statements

RSS Standards Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- This device must accept any interference, including interference that may cause undesired operation of the device

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. L'appareil ne doit pas produire de brouillage, et
- L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio Transmitter Statement

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radiation Exposure Statement

This equipment complies with FCC & IC RSS102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements ISEDétablies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Japan Statements

Class B Statement

This is a Class B product based on the standard of the VCCI Council. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に 近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

Denan Power Cord Statement



Danger:

Please be careful of the following while installing the equipment:

- Please only use the connecting cables, power cord, and AC adapters shipped with the equipment or specified by Avaya to be used with the equipment. If you use any other equipment, it may cause failures, malfunctioning, or fire
- Power cords shipped with this equipment must not be used with any other equipment. In case the above guidelines are not followed, it may lead to death or severe injury.



警告

本製品を安全にご使用頂くため、以下のことにご注意ください。

- 接続ケーブル、電源コード、AC アダプタなどの部品は、必ず 製品に同梱されております添付品または指定品をご使用くだ さい。添付品指定品以外の部品をご使用になると故障や動作 不良、火災の原因となることがあります。
- 同梱されております付属の電源コードを他の機器には使用しないでください。上記注意事項を守らないと、死亡や大怪我など人身事故の原因となることがあります。

México Statement

The operation of this equipment is subject to the following two conditions:

- 1. It is possible that this equipment or device may not cause harmful interference, and
- 2. This equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

- Es posible que este equipo o dispositivo no cause interferencia perjudicial y
- Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Brazil Statement

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

U.S. Federal Communications Commission (FCC) Statements

Compliance Statement

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including interferences that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interferences in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interferences to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 in or 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

EU Countries

This device when installed complies with the essential requirements and other relevant provisions of the EMC Directive 2014/30/EU, Safety LV Directive 2014/35/EU, Radio Equipment Directive 2014/53/EU, and RoHS Directive 2011/65/EU. A copy of the Declaration may be obtained from http://support.avaya.com or Avaya LLC, 350 Mt. Kemble Avenue, Morristown, NJ 07960 USA.

General Safety Warning

- Use only the Avaya approved Limited Power Source power supplies specified for this product.
- · Ensure that you:
 - Do not operate the device near water.
 - Do not use the device during a lightning storm.
 - Do not report a gas leak while in the vicinity of the leak.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and

product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya LLC.

The Bluetooth[™] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Avaya LLC is under license. Other non-Avaya trademarks and trade names are the property of their respective owners.

Contents

Chapter 1: Introduction	10
Purpose	
Change history	10
New branding for the Avaya IP-DECT solution	11
Chapter 2: Avaya Wireless Handset 3735 overview	12
Wireless Handset 3735 physical layout	
Identifying standard 3735 handsets with or without Bluetooth	
Parts of Wireless Handset 3735	16
Functions	
Accessories	18
DC3 Desktop Charger and DP1 Desktop Programmer	
Icons and text in the display	20
Chapter 3: Menu Tree	
Calls	29
Contacts	
Profiles	
Messaging	32
My favorites	33
Shortcuts	33
Connections	
Settings	35
In call	35
Additional In Call functions	37
Customizing the menu tree	37
Chapter 4: Basic operation	38
Switching the handset on	
Switching the handset off	
Log in or out of a shared phone	38
Logging onto a handset	
Logging off a handset	39
Turning the audible signal on or off	39
Locking and unlocking the keypad	40
Locking and unlocking the keypad in idle mode	40
Locking and unlocking the keypad during a call	40
Locking and Unlocking the handset	
Muting ringtone for incoming call or message	42
Chapter 5: Configuring Bluetooth Headset	43
Introduction to Bluetooth	
Wearing a Bluetooth headset	43

Headsets	44
Operation	44
Enabling a Bluetooth connection	44
Disabling the Bluetooth connection	44
Pairing and connecting a Bluetooth headset	45
Selecting a Bluetooth headset	45
Removing a headset	46
Changing the name of a Bluetooth headset	46
Changing the headset profile	46
Calling	
Making a call	47
Answering a call	47
Ending a call	
Volume and Mute Control	
Adjusting the volume during a call	
Muting or unmuting a call	
Messaging	
Transfer a call	
Transferring a call to the handset	
Transferring a call to the Bluetooth headset	
Switching to a corded headset	
Operation Notice	
Troubleshooting	
Changing the system	
Subscribing handset to the DECT system	
Unsubscribing the system	
Renaming the system	
Setting priority	
Defining handset actions when placed in charger and in call	
Defining handset actions when placed in charger and not in call	
Chapter 6: Menu operation	
Managing incoming calls	
Incoming call	
Answering a call	
Declining a call	
Ending a call	
Declining a call with a predefined message	
Answering a text message with a predefined message	
Managing call list	
Call list	
Editing a number from the call list	
Saving a number from the call list	
Sending a message from the call list	58

Deleting entries from the call list	58
Viewing missed calls	59
Viewing the time of a call	60
Push-to-talk group call	60
Managing calls in absentia	63
Call services	63
Absence handling	63
Deactivating the Absence settings	64
Diverting calls	64
Stopping the diversion of calls	65
Emergency calls	65
Managing Mid-call operations	66
During a call	66
Managing outgoing calls	73
Calling a number from contacts	73
Calling a contact from the local or company phonebook	
Calling a contact from the central phone book	
Making a local call	
Making an international call	74
Dialing a number with the headset button	75
Dialing using a pre-programmed number	
Dialing a number from the call list	75
Dialing last called number with the headset number	75
Managing contacts	76
Contacts	76
Managing shortcuts	80
Shortcuts	80
Managing My favorites	82
Adding to My favorites	82
Editing My favorites	82
Deleting My favorites	83
Managing messages	83
Message List	83
Inbox	83
Sent messages	88
Received messages	88
Enhanced messaging	89
Mobile data	92
Voice mail	93
Managing profiles	94
Profiles	94
Alarm operation	95
Activating an alarm	95

Testing the alarm. Alarm with location information. Alarm with data. Automatic call after alarm. Procedure call. System Profiles. Advanced Functions. Admin menu. Clearing lists in charger. Troubleshooting. Operational problems. Error or warning messages. 1 System Handling.	96 96 96 97 98 98 99 100 102 102 102
Alarm with data Automatic call after alarm Procedure call System Profiles Advanced Functions Admin menu Clearing lists in charger Troubleshooting Operational problems Error or warning messages	96 96 97 98 98 99 99 100 102 102 104
Automatic call after alarm	96 97 98 98 99 99 100 102 102 104
Procedure call	96 97 98 98 99 100 102 102 104
System Profiles	97 98 98 99 99 100 102 102 104
Advanced Functions	98 98 99 99 100 102 102
Admin menu Clearing lists in charger Troubleshooting Operational problems Error or warning messages	98 99 99 100 102 102 104
Clearing lists in charger Troubleshooting Operational problems Error or warning messages	99 99 100 102 102 104
TroubleshootingOperational problems	99 100 102 102 102
Operational problems	99 100 102 102 104
Error or warning messages	100 102 102 102 104
System Handling	102 102 102 104
, and the second se	102 102 104
	102 104
Software upgrade and additional features1	104
Handset updates via the charging rack1	
Chapter 7: Customizing Avaya Wireless Handset 3735 1	104
Settings	
Sound and alert settings	04
Keypad lock settings1	106
Phone lock settings	108
Display settings1	109
Time and date settings1	
Call answering settings1	112
Alarm settings1	113
Other settings1	113
Chapter 8: Maintenance1	115
Maintenance 1	115
Maintenance of Batteries1	115
Easy Replacement of Handset1	116
Attach the hinge-type clip1	118
Attach the swivel-type clip1	119
Attach cover for no clip1	119
Chapter 9: Energy efficiency 1	120
Chapter 10: Related Resources1	121
Documentation	
Appendix A: Safety Precautions1	
Safe operation	
Regulatory Compliance Statements (EU and EFTA)	
Exposure to radio frequency signals	
Regulatory Compliance Statements (USA and Canada only)	
FCC and IC compliance statements	
·	124

Precautions	12
Handset	
	12

Chapter 1: Introduction

Purpose

This document describes how to use the features and capabilities of Avaya Wireless Handset 3735.

This document is intended for people who want to learn how to use product features and capabilities.

Change history

Issue	Date	Summary of changes	
Release 4.7.6, Issue 4	December 2023	Added <u>Activating automatic callback</u> on page 68.	
Release 4.7.5, Issue 3	November 2022	Added information about the new variant of the Avaya Wireless Handset 3735 without Bluetooth.	
Release 4.7.3, Issue	November 2021	Updated the <u>Error or warning messages</u> on page 100.	
2		Updated the <u>Maintenance of Batteries</u> on page 115.	
		Added information about "charging stopped" icon in lcons on page 21.	
		Updated <u>Call list</u> on page 57.	
		Updated <u>Absence handling</u> on page 63.	
		Updated <u>Diverting calls</u> on page 64.	
		Updated <u>Adjusting the ring volume</u> on page 104.	
Release 4.7.2, Issue 1	September 2020	Rebranded the Avaya IP-DECT solution and DECT Handsets. These changes take effect with Avaya Wireless Handset 3700 Series, previously known as Avaya IP-DECT, Release 4.7.2. See New branding for the Avaya IP-DECT solution on page 11.	

New branding for the Avaya IP-DECT solution

In Release 4.7.2, the Avaya IP-DECT solution is rebranded to Avaya Wireless Handset 3700 Series. The following table provides rebranding details of the wireless handsets, base stations, and other equipment included in the solution:

Previously known as	Rebranded as	
IP DECT	Avaya Wireless Handset 3700 Series	
IP DECT Handset 3730	Avaya Wireless Handset 3730	
IP DECT Handset 3735	Avaya Wireless Handset 3735	
IP DECT Handset 3745	Avaya Wireless Handset 3745	
IP DECT Handset 3749	Avaya Wireless Handset 3749	
IP DECT Base Station	Avaya Wireless Base Station 3700	
IP DECT Handset 373x	Avaya Wireless Handset 373x	
IP DECT Handset 374x	Avaya Wireless Handset 374x	

Chapter 2: Avaya Wireless Handset 3735 overview

The Avaya Wireless Handset 3735 is a robust DECT handset designed for medium to high demand environments such as hospitals, elderly care, retail and enterprise. Its advanced messaging features make it ideal for applications where two-way messaging or interaction with automated equipment is required.

The Avaya Wireless Handset 3735 streamlines maintenance or administration and can easily be adapted to fit the changing needs of large and diversified organizations.

The available models of the handset are:

- Avaya Wireless Handset 3735
- Avaya Wireless Handset 3735 Alarm
- Avaya Wireless Handset 3735 without Bluetooth.


Avaya Wireless Handset 3735 has the following rich features:

- Messaging
- Telephony
- · Color display
- Bluetooth (except the handset model without Bluetooth)

Related links

Wireless Handset 3735 physical layout on page 13

Wireless Handset 3735 physical layout

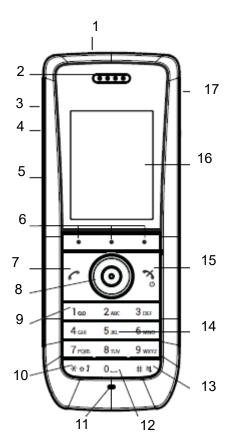

Callout number	Name	Button Icon	Description	
1	Multifunction/Alarm button	N/A	 Used as a shortcut to: Functions Long or double press modes Depending on the model of handset, the button can be used as a push button, alarm or can be configured as a PTT button. 	
2	Earpiece speaker		-	
3	Volume button (up)	N/A	Increases the speaker volume.	
4	Volume button (down)	N/A	Decreases the speaker volume.	

Callout number	Name	Button Icon	Description	
5	Mute and PTT button	N/A	Turning on or off audible signals in an idle mode.	
			Muting the ring signal for an incoming call.	
			Turning the microphone on or off during a call.	
6	Soft keys	• • •	Can be pre-programmed or used with the GUI.	
7	Off hook key	0	Used for:	
			Answering a call.	
			Pre-dialling a number.	
			Creating a shortcut to the Call list.	
8	Five-way navigation key	0	Used to step in the menu and carry out various functions.	
			A navigation key with the Left, Right, Up, Down, and Confirmation (in the middle) keys. These keys, except the middle key, can also be programmed for shortcuts.	
9	Voicemail access	N/A	Gives a quick access to the handset Voicemail. This is a system dependent feature.	
10	Key lock, and Upper	N/A	Used for:	
	and Lower case		Locking the keypad in combination with the soft key Lock .	
			Switching between upper or lower case and digits.	
11	Microphone	•	-	
12	Space	N/A	Adds space between text.	
13	Sound off key	N/A	Used to:	
			Turning on or off audible signals in an idle mode.	
			Silencing the ring signal at incoming call.	
			Turning the microphone on or off during a call.	
14	Tactile indicator	N/A	Indicates the centre of the key pad.	

Callout number	Name	Button Icon	Description	
15	On hook and On/Off key	%	Used as a combined button: To end a call To return to the standby mode To switch the handset on or off by long press	
16	Color display	N/A	The full graphic type display is a 1.77 inch TFT. The display has multiple colors and backlighting.	
17	Headset connector	N/A	The headset connector is for connecting a standard 3.5 mm headset. The connector is protected against dust by using the headset connector cover.	

Identifying standard 3735 handsets with or without Bluetooth

You can differentiate between standard 3735 handsets with or without Bluetooth from their product labels. The labels indicate whether the handset variant supports Bluetooth. The battery compartment on the back panel of the handset contains the product label. Additionally, the **Connections** menu provides the **Bluetooth** option for handset variants with Bluetooth.

Label samples of handsets with and without Bluetooth are the following:



Avaya 3735 Wireless Handset with Bluetooth



Avaya 3735 Wireless Handset without Bluetooth

Parts of Wireless Handset 3735

! Important:

The handset may retain small magnetic objects around the mouthcap or earcap region.

Parts of the handset	Description	
Case	The plastic cover parts are made of durable PC/ABS material.	
Antenna	The antenna is integrated inside the handset.	
Loudspeaker	The handset has a separate loudspeaker for the alerting and hands free function. The loudspeaker is located on the back side of the handset.	
Microphone	The microphone is located on the front bottom side of the handset.	
Clip	There are two different belt clip options for the handset: a hinge-type clip (standard) or a swivel-type clip.	
	Use the clip to attach the handset to a belt or similar.	
	You can use the handset without any clip.	
Battery	The battery is a rechargeable Li-Ion battery, located under a battery cover. The battery is fully charged within four hours.	

Functions

Note:

Some functions are license/system dependent or require settings in handset via WinPDM/ Device Manager.

Table 1: Functions of Wireless Handset 3735

Functions	3735	3735 Alarm	3735 w/o Bluetooth
General	•	•	·
Easy registration	~	~	~
Enhanced DECT Security	~	~	•
Vibrator	~	~	•
Headset connector	~	~	•

Functions	3735	3735 Alarm	3735 w/o Bluetooth
Loudspeaking function	~	~	•
3 Programmable Soft keys	~	~	•
9 Programmable Hot keys	~	~	•
Profiles	•	~	•
System profiles	•	•	~
Shared phone	•	~	~
Contacts (250 contacts)	•	~	~
Central phonebook	•	•	•
Company phonebook (1000 contacts)	•	~	~
Downloadable languages	•	~	•
Multifunction button	•	_	~
Programmable Navigation key	•	~	~
Centralized management	•	~	~
Personalized menus	•	~	~
Replaceable battery	•	~	~
Easy replacement of handset	~	•	·
Handset restrictions	•	•	•
Bluetooth	~	•	_
Telephony	1	'	<u>'</u>

Functions	3735	3735 Alarm	3735 w/o Bluetooth
Push to Talk (PTT)	~	~	•
Procedure call	•	~	•
Voicemail access	•	~	•
Microphone on/off during call	•	~	•
Five predefined emergency numbers	•	~	~
Messaging			
Mini messaging (12 characters)	_	_	_
Data Send	~	~	~
Colored messaging	~	~	~
Interactive messaging	~	~	~
Data with prefix	•	~	~
Alarm			
Push button alarm	_	~	_
Acoustic Location Signal (ALS)	_	~	_
Alarm with data	_	•	_
Location			
Location, base stations	•	V	•

Accessories

- Desktop charger
- Desktop programmer
- Charging rack
- Battery pack charger

- · Carrying case
- Belt Clip
 - hinge-type
 - swivel-type
- · Security cord
- Headset with microphone on boom
- · Headset with microphone on cable
- Bluetooth headset (Only with models supporting Bluetooth)

DC3 Desktop Charger and DP1 Desktop Programmer



Figure 1: Chargers

You can use any of the following chargers:

- DC3 Desktop charger: Charges the handset only. The charger is delivered with a plug-in power supply and connected to an ordinary wall socket.
- DP1 Desktop Programmer: Downloads new software and synchronizes parameters. It doesn't provide the charging capability.
- Note:

Use Avaya Wireless Handset 373x only with a DP1 marked DP1-UAAA.

Note:

Use the charger within the temperature range of $+5^{\circ}$ C $- +40^{\circ}$ C.

CR3 Charging Rack

The CR3 Charging Rack is used for:

- Charging several handsets
- Synchronizing parameters
- Downloading software

The built in power supply can charge up to six handsets.

Battery pack charger

The battery pack charger is used for charging up to six spare batteries.

Wireless Handset 373x Accessories

Belt Clips

The two belt clip options are:

- Hinge-type clip: The clip on the back of the handset is used to fasten the handset to a belt or similar. The clip can also be changed to a swivel-type.
- Swivel-type clip: The ordinary belt clip can be replaced with a special swivel-type belt clip that is adapted to firmly secure the handset into your belt.

Note:

The handset can be used without a belt clip by installing the included filler plate.

Security Cord

The security cord is 800 mm long and is attached directly to the handset.

Carrying case

The carrying case is especially designed for the handset and includes a swivel type belt clip. The handset is fully operational while located in the carrying case.

Headset

A headset is recommended if the handset is frequently used or the user want to have both hands free.

The headset comes in the following three versions:

- Microphone integrated in the cable
- · Microphone on a boom
- Hearing protection

In order to achieve optimal audio quality with the different headset types it is recommended to select the corresponding headset profile. See Changing the headset profile on page 46.

Icons and text in the display

All functions and settings available to the user are shown as icons and text in the display. The icons and text in the display indicate functions and settings to which you have access. The display normally displays date and time, the Owner ID and telephone number. The Owner ID can manually be set by the user.

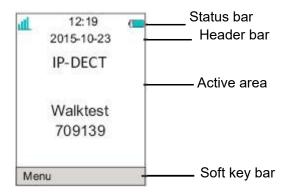


Figure 2: Example of a display configuration in idle mode

Name	Description
Status bar	This is the top row that is used for icons which provide information for signal strength, missed calls, new messages, phone lock, key lock, sound off, time and battery status. This row is always visible in all screens.
Header bar	This row displays the current date, headset connection, Bluetooth connection, and system connection.
Active area	This row contains information such as, profiles, the name of the system to which the handset is connected. A user identity provided from the system and/or an Owner ID can also be displayed if configured in the Settings menu. This is also the area for pop up text for example, missed calls or to confirm an action.
Soft key bar	This row is used for soft keys that can be used as shortcuts for functions in the handset.
Scroll bar	This is the bottom row that is located to the right side of the active area. It becomes visible when a menu screen has more than six menus, or if the complete text in a message cannot be displayed on the screen simultaneously.

Icons

Icon	Name	Description
Щ	Signal strength	This icon is visible in the upper left corner. The number of bars shown on display depends on the signal strength.
	Full battery	This icon is displayed in upper right corner.
	Low battery warning	This icon is shown when the battery has 10% or less remaining capacity left.
	Empty battery warning	This icon is flashing when the battery has 5% or less remaining capacity left.

Icon	Name	Description
	Charging stopped	This icon is displayed when the ambient temperature is out of permitted bounds.
		The icon is displayed only when the handset is switched off while charging.
	Mute and PTT	This icon is displayed when the Sound off key or Mute is pressed.
Ž.	Microphone off	This icon indicates a silenced microphone. It is displayed after a long press on the Sound off key, Mute during a call.
		During a push-to-talk call, the microphone is silenced when the push-to-talk is released.
■ ×	Silent volume	This icon is displayed when the volume has been set to Silent .
•	Loudspeaking	This icon is displayed in the soft key bar during a call. Pressing this icon turns on the loudspeaker.
*	Loudspeaking off	This icon is displayed after the soft key for Loudspeaking icon has been pressed. Pressing this icon turns off the loudspeaker.
	New message	Also known as Interactive message, this icon indicates that a new text message (or messages) has arrived. The icon remains in the status bar until all new messages in the inbox are read.
	Request for answer	This icon in front of a message indicates that this message must be acknowledged or rejected.

Icon	Name	Description
OD .	Voicemail message	This icon is displayed in the status bar when there are voicemails. The icon remains until voicemail has been listened to.
		This icon is displayed in the message inbox when there are voicemails. The icon remains until voicemail has been listened to.
	Read message	Also known as Read Interactive message , this icon in front of a message shows that this message once has been read.
•	Sent message	This icon is displayed when a message is delivered to its recipient.
<i>√</i> • <i>M</i>	High prio	Also known as Alarm prio , this icon indicates high priority of a message.
P	Key lock	This icon indicates a locked keypad.
a	Locked entry	This icon indicates that the contact cannot be edited or deleted by the user.
a	Phone lock	This icon indicates a locked handset.
*	Bluetooth	This icon indicates that Bluetooth is enabled.
(A)	Bluetooth headset	This icon indicates that Bluetooth headset is connected to the handset.
	Headset	This icon indicates that a corded headset is connected to the handset.
-	Outgoing call	This icon is added to all outgoing calls in the call list.
	Incoming call	This icon is added to all answered calls in the call list.

Icon	Name	Description
	Push-to-talk	This icon is added to all incoming, outgoing, missed and answered PTT calls in the call list or missed calls.
		Note:
		The icon is added when a PTT invitation is managed as a call only.
O.	Missed call	This icon is added to all missed calls in the call list.
E,	Missed call	This icon indicates missed calls in the status bar.
0	WinPDM/Device Manager communication	This icon is visible when handset is communicating with WinPDM or Device Manager via advanced charger.
		This icon is also visible when Avaya Wireless Base Station 3700 is connecting to BroadWorks Device Management System and Wireless Handset 3735 is subscribed to this system.

Menu Icons

Icon	Name	Description
1	Contacts	Contains all names or numbers in the Contacts list.
		In addition, a company phonebook* with up to 1000 entries can be downloaded to the handset via the WinPDM.
		A central phonebook* can also be accessed from the Contacts menu.
		The asterisk (*) denotes system dependency.
	My favorites	Contains menu shortcuts used to customize own menu.
	Messaging	Contains all message handling such as reading and writing messages.

Icon	Name	Description
	Calls	Contains call lists, call time, and call services*. Call services is configured in the WinPDM or Device Manager.
		The asterisk (*) denotes system dependency.
	Connections	Contains Bluetooth connection, Headset selection, System selection, and In charger selection.
		Note:
		Avaya Wireless Handset 3735 without Bluetooth does not have the Bluetooth option in the Connections menu.
•	Settings	Contains personal handset settings such as changing the ring volume, selecting language.
	Shortcuts	Contains shortcuts for:
		Soft keys
		Hot keys
		Navigation keys
		Multifunction
		Note:
		3735 Alarm does not support Multifunction .
1)	Profiles	Allows up to four different profiles to be added. The Normal profile is active by default.

373x Keys and buttons

Icon	Name	Description
C	Off-hook key	This key is used for connecting calls. One short press in standby mode opens the call list.


Icon	Name	Description
%	On-hook and On/Off key	This key is used for disconnecting calls and returning to main screen. A long press in standby mode switches the handset on or off.
	Navigation/Confirmation Key	This key is used to step in the menu and when working in text mode. The picture on the left shows how to press the navigation key to step left or right and up or down in the menu. The navigation key can be programmed. Up is by default a shortcut to the Inbox and Down is a shortcut to Call contact . During a call the volume can be increased or decreased by pressing up and down on the navigation key.
# %	Sound off key	A long press on the key in idle mode, changes between ring signal on or off. At incoming call, a short press on the key silences the ring signal. During a call, a long press on the key changes between microphone on or off.
N/A	Mute and PTT button	A long press on the Mute in idle mode, changes between ring signal on or off, at incoming call, a short press on the button silences the ring signal. During a call, a long press on the button changes between microphone on or off. During a PTT call, the microphone is silenced when PTT is released.
* ♠ β	Key lock, and Upper and Lower case key	This key is to lock the keypad in combination with the soft key Lock. It is also for switching between upper and lower case and digits.

Icon	Name	Description
soft keys	Soft keys	The three Soft keys are located just beneath the display. The functions of each soft key is indicated by text in the display just above the keys.
		In idle mode, the Soft keys can be used for specific functions defined by the user of the handset.
-	Hot keys	Any key between 2 and 9 can be set to a Hot key. A long press on any of these numbers in stand by mode are by default a shortcut to the Call contact list. The list is in an alphabetic order, and depending on which key that is pressed is dependent on where in the list the contact appears. A Hot key can be programmed to give access to frequently used functions such as dialling a specific handset number, a shortcut on the menu, or sending an SMS.
-	Multifunction	The button is used as a shortcut to functions; long or double press modes. By default it is not used, but can be defined by the user of the handset. If the button is defined, it can be used in standby mode only.
		Note:
		The support for this feature is dependent on what model of handset is used.

Icon	Name	Description
-	Volume button	The two buttons placed on the upper left side of the handset are used for increasing or decreasing the earpiece, headset, and the loudspeaker volume.
		If configured by an administrator, the volume buttons can be used to adjust the ring volume in idle mode.
		The volume level will be indicated with a pop-up on the display.


Chapter 3: Menu Tree

Calls

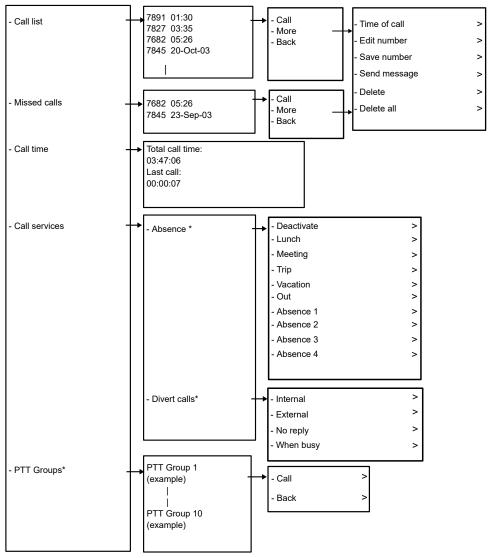

^{*)} Visible if defined in the WinPDM/Device Manager

Contacts

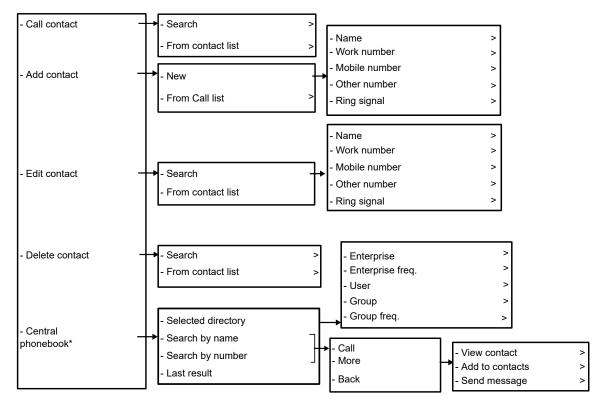


^{*}System dependent

Tip:


When adding or editing a number in a contact, a variable or the character U in the Work/ Mobile/Other number field can be added that allows the user to enter one or more additional numerical characters before calling the number.

Profiles

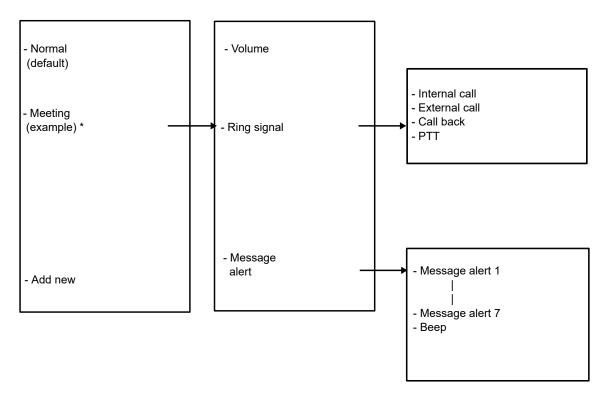

^{*}This example profile does not have all applicable settings.


Messaging

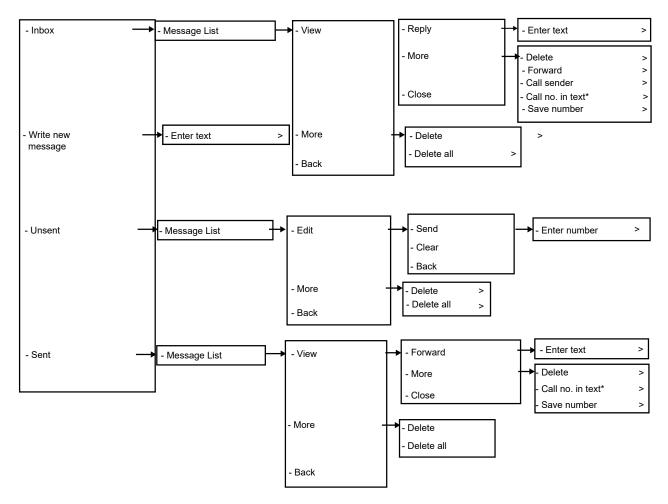


^{*} Visible if the number consists of minimum 3 digits.

My favorites

When configuring the **Phone call** function, a variable or the character U can be added to the **Enter number** field to allow the user to enter one or more additional numerical characters before calling the number.

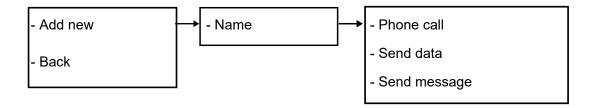


Shortcuts

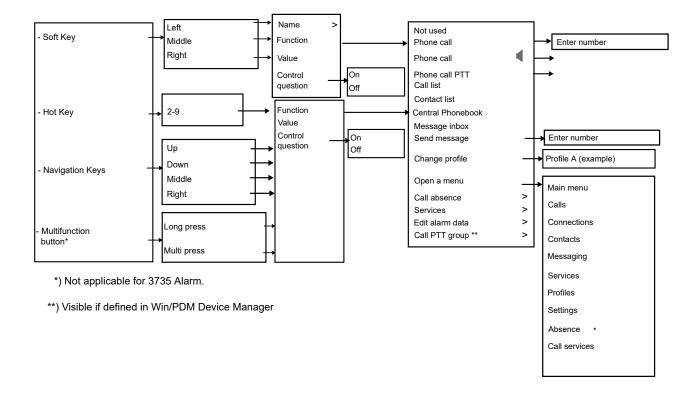

When configuring the **Phone call** function, a variable or character U can be added to the **Enter number** field that allows the user to enter additional numerical character(s) before calling the number.


Connections

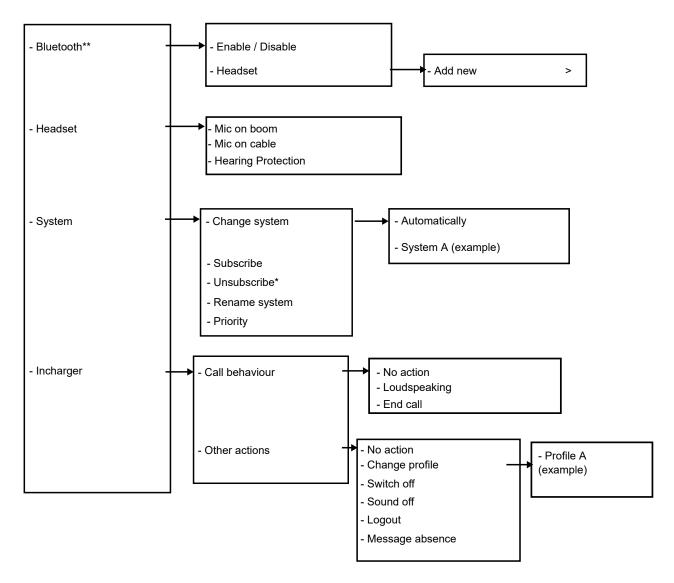

- *) It is not possible to unsubscribe a protected system via the System menu.

 Unsubscription of the system must be made via the Admin menu or the DECT system.
- **) Avaya Wireless Handset 3735 w/o Bluetooth does not have the Bluetooth menu option.


Settings

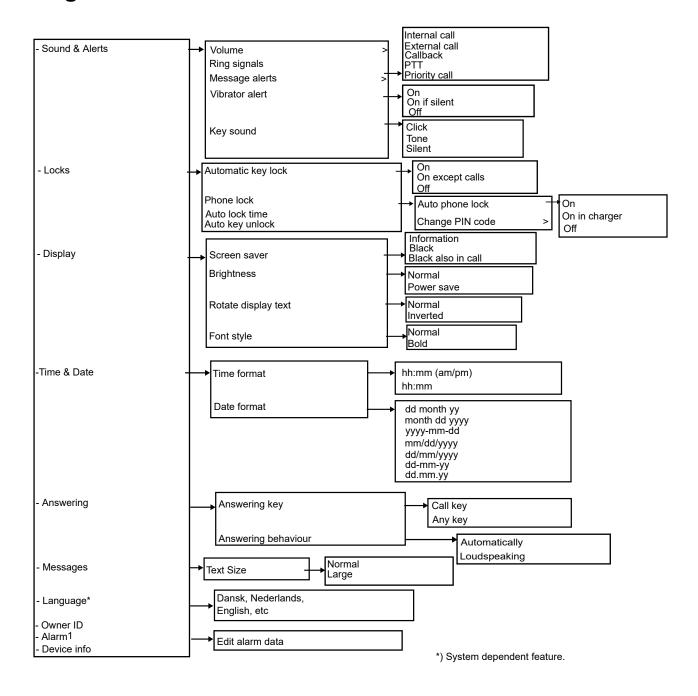

In call

The **In Call** menu displays a list of functions that can be accessed during a call. You can view the available functions by pressing the **More** soft key. Some functions are always provided and others

may be made available by the administrator via the WinPDM/Device manager. To use a function, navigate the **In Call** menu to highlight the required function and then press the **More** soft key.

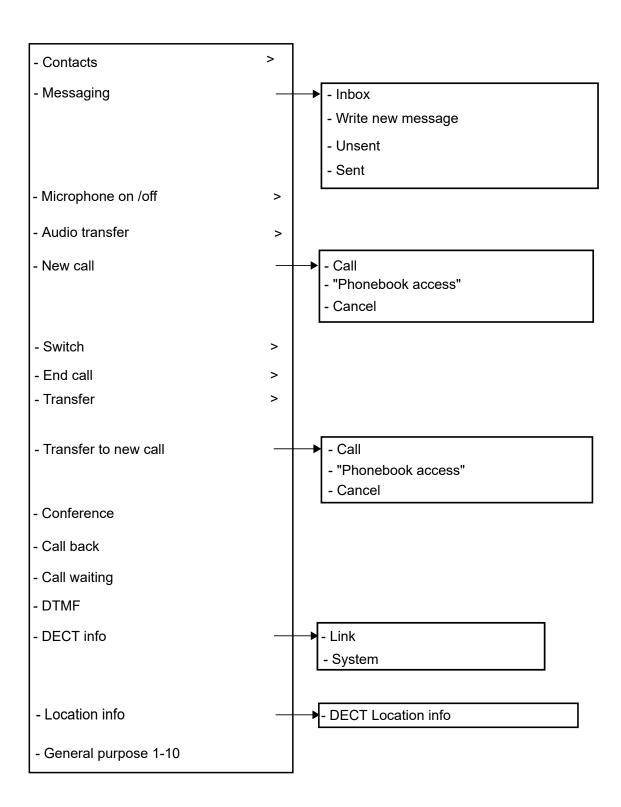



Note:

When you make a call from a locked handset, the system displays limited functions in the In Call menu. When you make a call from an unlocked handset, the system displays the entire

Additional In Call functions

Besides the default In Call functions, up to 10 extra system specific codes or general purposes can be defined.

Customizing the menu tree

The menu tree can be customized by hiding some of the functions that are available but not in use.

The functions that can be hidden are defined in the WinPDM.

Chapter 4: Basic operation

Switching the handset on

Procedure

- 1. Press and hold the **On-hook and On/Off** (o) kev.
 - The handset vibrates when it is on and the display lights up followed by a confirmation message.
- 2. Press Yes.

Switching the handset off

Before you begin

The handset must be in an idle mode.

Procedure

- 1. Press and hold the **On-hook and On/Off** () key. The system displays the Switch off? window.
- 2. To confirm, press Yes.

If a handset is shared and one of the users logs off the shared handset, the lock that prevents the handset from unauthorized use is deactivated.

Log in or out of a shared phone



Note:

More than one user can use the handset with the shared phone feature. When a handset is configured to be a shared phone, it can be used by any shared phone user in the system. The message and call lists are deleted when a user logs off a handset.

If the handset is configured in the WinPDM or Device Manager, an emergency call can be made from a handset that is logged off.

Logging onto a handset

Before you begin

The handset must be switched on.

Procedure

- 1. A Login? dialog window appears. Press Yes.
- 2. Enter User ID and password.
- 3. Press **Login**

In SIP environment, if a user logs in to a handset using an extension that was already in use by another handset, any ongoing call on that extension is disconnected.

The user is automatically logged out from a previously used handset.

Logging off a handset

Procedure

1. Press and hold the **On-hook and On/Off** () key.

The system displays the Logout? window.

2. Press Yes.

If a phone is shared and one of the users logs off the shared phone, the lock that prevents the handset from unauthorized use is deactivated.

Turning the audible signal on or off

About this task

Use this procedure to turn the audible signal on or off.

Before you begin

The handset must be in idle mode.

Procedure

Long press the **Sound off** (# 🐧) key or the **Mute** Nutron.



The status of the handset changes between ring signals on or off. The status of the handset changes between ring signals on or off. silenced handset.



Locking and unlocking the keypad

Locking and unlocking the keypad in idle mode

About this task

Use the following procedure to lock the keypad and prevent accidental key presses.

Procedure

Lock the keypad during a call.

- To lock the keypad, press the Key lock, and Upper and Lower case (★ ♠ ¹) key. Press and hold this key for a few seconds until the **Lock** soft key appears.
- 2. Press the Lock soft key.

Unlock the keypad during a call.

- 3. To unlock the keypad, press the **Key lock, and Upper and Lower case** (★ ♠ ♣) key. The system displays the message Unlock?.
- 4. Press the Yes soft key.



■ Note:

You can answer an incoming call or press an alarm button when the keypad is locked. If the WinPDM or Device Manager has an emergency call configured, you can make an emergency call when the keypad is locked.

Locking and unlocking the keypad during a call

About this task

Use this procedure to lock the keypad during a call and prevent pressing the keys accidentally. This is useful when a headset is used and the handset is attached to a pocket or a belt.

Procedure

Lock the keypad during a call.

- 1. To lock the keypad, press the **Key lock, and Upper and Lower case** (* 1) key. Press and hold this key for a few seconds until the **Lock** soft key appears.
- 2. Press the **Lock** soft key.

Unlock the keypad during a call.

- To unlock the keypad, press the Key lock, and Upper and Lower case (★☆¹) key. The system displays the message Unlock?.
- 4. Press Yes.



During a call, the Volume button and Alarm button can be pressed while the keypad is locked.

Depending on the model of the handset used, you can press the **Alarm** button also.

Locking and Unlocking the handset

About this task

The handset can be protected from unauthorized use. If this function is activated, a PIN code must be entered, for example, to switch on the handset, to answer an incoming call etc. The default phone lock code (0000) can be changed to any 4 - 8 digit personalized code.

If a phone is shared and one of the users logs off the shared phone, the lock that prevents the handset from unauthorized use is deactivated.

Procedure

- 1. Press Menu.
- Select Settings.
- Select Locks.
- 4. Select Phone lock.
- 5. Select Auto phone lock.
- 6. Select On, On in charger, or Off.



You can define a handset with predefined emergency numbers that can be called while the handset is locked.



Depending on the model of the handset, you can use an Alarm button while the handset is locked

The **Lock** function is deactivated when a one of the user logs off the shared phone.

Muting ringtone for incoming call or message

About this task

You can mute the handset ringtone on an incoming call or message. The call is not hung up when the ringtone is muted. If the call is unanswered, it will revert to voicemail if the handset has been configured for voicemail.

Procedure

Press the **Sound off** (# 🐧) key or the **Mute** (🔻) button while the handset is ringing.

Chapter 5: Configuring Bluetooth Headset

Introduction to Bluetooth

The **Bluetooth** technology replaces the cord between the cordless handset and the headset. This allows the user to move more freely and eliminates the risk of a headset cord getting tangled.

The **Bluetooth** transceiver is factory mounted on the circuit board of the cordless handset.



Handset models without Bluetooth do not have the **Bluetooth** connection option. Such handsets do not support pairing with a Bluetooth headset.

Supported **Bluetooth** functions are:

- · Pair the cordless handset with a headset.
- Choose which device to use when making a call.
- Play a ring tone in the **Bluetooth** headset.
- Answer and connect the audio path to the **Bluetooth** headset when answering a call using the headset.
- End call using the button of the **Bluetooth** headset.
- Transfer audio to or from **Bluetooth** headset during a call, using the menu in the cordless handset.
- Increase or decrease the volume of the Bluetooth headset using the volume buttons on the headset.

Wearing a Bluetooth headset

For optimal performance wear the **Bluetooth** headset and the handset on the same side of your body. You can achieve the best audio quality in the headset when there is no obstruction between the headset and the cordless handset.

Headsets

A number of **Bluetooth** headsets for different work situations have been tested together with the handset.

The handset supports the **Bluetooth** 2.0 standard. Other headsets may also work, though they have not been verified by Avaya.



Note:

Your **Bluetooth** headset may have more or less functions than described here.

Operation

Step between the menus with the navigation key. Confirm each menu selection by pressing the soft key Select.

Enabling a Bluetooth connection

Procedure

- 1. Press Menu.
- 2. Select Connections.
- 3. Select Bluetooth.
- 4. Select Enable.

The handset displays the Bluetooth enabled message.

The handset displays a **Bluetooth** (**) connection icon in the status bar.

Disabling the Bluetooth connection

Procedure

- 1. Press Menu.
- Select Connections.
- Select Bluetooth.
- 4. Select Disable.

The handset displays the Bluetooth disabled message.

Pairing and connecting a Bluetooth headset

About this task

To use a Bluetooth headset, pair it first with the handset. You only need to pair the Bluetooth headset once.

The handset automatically connects with a paired headset when it is in the range. The icon in front of a headset name indicates an established connection.

Procedure

- 1. Place the Bluetooth headset and the handset next to each other.
- 2. Set the Bluetooth headset in pairing mode.
- 3. On the handset, enable Bluetooth.
- 4. On the handset, select Connections > Bluetooth > Headset > Add new.

The handset displays the Put headset in Pairing mode message.

5. Press **OK**.

The handset searches for a Bluetooth headset for connection.

- 6. When the headset is found, press Pair.
- 7. **(Optional)** If required, enter the PIN code.
- 8. Press OK.

If the pairing is successful, the handset displays the Successful pairing message.

The headset is connected and indicated by a colored square () in front of the headset name.

9. To add another headset, repeat steps 1 to 6.

You can pair up to eight headsets with the handset but can select only one at a time to connect. The handset displays the paired headsets by a default name in the handset menu **Headset**.

Selecting a Bluetooth headset

Procedure

- 1. Press Menu.
- Select Connections.
- 3. Select **Bluetooth** > **Headset**.
- 4. Select a headset by pressing up or down on the navigation key.
- Press Select.

The handset displays the message: Connection successful.

The headset is selected.

When you select a new headset, any previous headset automatically gets disconnected.

Removing a headset

Procedure

- 1. Press Menu.
- 2. Select Connections.
- Select Bluetooth > Headset.
- 4. Select a headset by pressing up or down on the navigation key.
- 5. Press More.
- 6. Select **Delete**.
- 7. Press OK.

Changing the name of a Bluetooth headset

About this task

The headset name that appears in the list of paired headsets is its default name. Use this procedure for changing the name of the Bluetooth headset.

Procedure

- 1. Press Menu.
- Select Connections.
- 3. Select Bluetooth > Headset.
- 4. Step with the navigation key, ▲ or ▼ to select the headset.
- 5. Select **More** > **Edit name** and enter a new name.

Changing the headset profile

About this task

Use this procedure to select an appropriate headset type to achieve optimal audio quality.

Procedure

- 1. Press Menu.
- 2. Select Connections.
- 3. Select Headset.
- 4. Select one of the following:
 - Mic on boom: Optimizes audio.

This option is the default setting.

• Hearing protection: Reduces the noise exposure level and the risk of hearing loss.

- Customized headset profile: Is visible if the headset profile is configured in WinPDM or Device Manager.
- 5. Press Select.

Calling

Making a call

Procedure

- 1. Dial the number on the handset.
- 2. Press Call or the Off-hook key.

The system displays Transfer call to phone? message.

- 3. Do one of the following:
 - To use the **Bluetooth** headset, press **No** or ignore the message.
 - To use the handset, press Yes.

Answering a call

About this task

A ring signal sounds in both the selected Bluetooth headset and the handset to signal an incoming call.

Procedure

Do any of the following:

- To answer the call in the Bluetooth headset, press the button on the headset.
- To answer the call in the handset, press Off-hook key.

Ending a call

Procedure

Do any of the following:

- To end the call using the **Bluetooth** headset, press the button on the headset.
- To end the call using the handset, press the On-hook key.

Volume and Mute Control

Adjusting the volume during a call

About this task

Depending on the Bluetooth headset, it might be possible to adjust the volume directly on the headset.

Procedure

On the upper left side of the handset, press **Volume up** to increase the volume and **Volume down** to decrease the volume.

Muting or unmuting a call

- To mute yourself, do the following:
 - 1. Press **More** during the call.
 - 2. Select Microphone off.
 - 3. Press Select.

The icon indicates a silenced microphone. This means that the other party in an ongoing call cannot hear you.

- To unmute yourself, do the following:
 - 1. Press **More** during the call.
 - 2. Select Microphone on.
 - 3. Press Select.

You can also turn the microphone on and off by long pressing the **Sound off** (# 🐧) key or the **Mute** (🔻) button. A short beep is also heard indicating that the microphone is turned on or off.

When you press the **Mute** () button in a PTT call, no beep is heard.

Messaging

When you receive a text message during an ongoing call, a beep sounds in the **Bluetooth** headset.

Transfer a call

Transferring a call to the handset

About this task

Use this procedure for transferring a call to the handset while you are on a call with the **Bluetooth** headset.

Procedure

- 1. Press More.
- 2. Select Audio transfer.

Transferring a call to the Bluetooth headset

About this task

Use this procedure for transferring the call audio to the Bluetooth headset while you are on a call using the handset.

Procedure

- 1. Press More.
- Select Audio transfer.

Switching to a corded headset

Before you begin

You must on a call.

Procedure

To transfer the call to the headset automatically, connect the corded headset.

Operation Notice

Accessibility and voice quality

The connectivity to the communication system is not available. If you cannot connect with your system, contact your system administrator. For best voice quality, avoid positioning near computer, radio or similar equipment.

Operating area

You can only use your cordless handset in the area that is covered by your system. Outside this area, you loose contact with the system. The signal strength icon will be low and Searching is displayed.

Out of Range

When you leave the system's coverage area a short beep will sound and Searching is displayed. The out of range beep is repeated every minute for 30 minutes. The sound can be

turned off by long pressing the **Sound off** (# 🐧) key , or 🦠 .



When re-entering the coverage area it can take a couple of minutes before the handset automatically has registered into the system.

Troubleshooting

Problem	Reason	Solution
No headset found	Headset is turned off	Turn on the headset
	Headset is out of battery	Charge headset
	Headset is out of range	Move the headset closer to the handset < 10 meters.
	Headset is not in pairing mode	Put headset into pairing mode.
Pairing fails	Headset is not in pairing mode	Turn headset into pairing or discoverable mode.
	Incorrect PIN entered	Try again and enter correct PIN. Consult headset user guide for pairing instructions.
Connecting fails/Failed to connect headset	Headset is not turned on	Turn on the headset
	Headset is out of range	Move headset closer to the handset
	Link key in headset has been deleted	Repeat pairing procedure
	Headset is already connected to another handset	Disconnect headset from the other handset
	Too close to interfering devices.	Interfering devices can be WLAN equipment, microwaves, etc. Move away from the devices causing interference.
Headset can not connect to the handset	Handset is not turned on	Turn the handset on
	Handset is out of range	Move the handset closer to the headset
	Bluetooth module is disabled	Enable Bluetooth in Bluetooth menu

Table continues...

Problem	Reason	Solution
	Another headset is already connected to the handset	Disconnect the connected headset
	Link key is missing in either headset or the handset.	Repeat pairing procedure
	Too close to interfering devices.	Interfering devices can be WLAN equipment, microwaves, etc. Move away from the devices causing interference.

Changing the system

Procedure

- 1. Select System.
- 2. Select Change System.
- 3. Select Automatic or a specific system.

If the handset is set to **Automatic**, it selects a system according to the priority list.

Automatic cannot be used in both legacy and Wireless Handset 3700 systems.

Subscribing handset to the DECT system

About this task

To subscribe to Wireless Handset 3700 DECT system manually, you require the Portable Access Right Key: (PARK) and Authentication Code: (AC) related to the system.

Procedure

- 1. Press Menu.
- 2. Select Connections.
- 3. Select **System**.
- 4. Select Subscribe.

The system displays:

- IPDI: A unique code that is assigned to the handset.
- User ID.
- 5. Press Next.
- 6. **(Optional)** In the **System name** field, enter the system name.

If you do not enter the system name, the default name is used. For example, System A, System B.

7. Press Next.

- 8. Enter **PARK code** (max. 31 digits). The PARK code is not required if there is no alien DECT system within the coverage area.
- 9. Enter **AC code**. The AC code length must be between 4 8 digits.
- 10. Press **Next**.

The system displays the Protection on? message.

11. To protect the new system, select Yes.

Note:

You cannot delete a protected system using the **System** menu. The unsubscription must be made using the **Admin** menu or the Wireless Handset 3700 DECT system.

12. Press OK.

A searching mode starts.

Unsubscribing the system

Procedure

- 1. Press Menu.
- 2. Select Connections.
- 3. Select System.
- 4. Select Unsubscribe.
- 5. Select the system to unsubscribe.
- 6. Press Yes.

Renaming the system

About this task

Use this procedure to change the name of the system in the handset.

Procedure

- 1. Press Menu.
- 2. Select Connections.
- 3. Select System.
- 4. Select Rename system.
- 5. Select the system to rename and press **Edit**.
- 6. In the **Name** field, enter new name.
- 7. Press Save.

Setting priority

About this task

The default order of priority is the order of entered subscriptions. This means that the first subscribed system has the highest priority. You can edit the priority list and set the systems in priority by moving them up or down in the list.

This priority list is used in combination with the system set to **Automatic**.

Procedure

- 1. Press Menu.
- Select Settings.
- Select System.
- 4. Select Priority.
- 5. Change the priority by using the navigation key to scroll up and down.
- 6. To save the priority, select **Back**.

Defining handset actions when placed in charger and in call

About this task

Use this procedure to define the functions of a handset when placed in a charger during a call.

Procedure

- 1. Press Menu.
- 2. Select Connections.
- 3. Select In charger.
- 4. Select Call behavior.
- 5. Select any of the following:
 - No action: No action is performed when the handset is placed in a charger during a call.
 - Loudspeaking: The loudspeaker is activated when the handset is placed in a charger during a call.
 - **End call**: The call is disconnected when the handset is placed in a charger.

Defining handset actions when placed in charger and not in call

About this task

Use this procedure to define the functions of a handset when the handset is not on a call and placed in a charger.

Procedure

Press Menu.

- 2. Select Connections.
- Select In charger.
- 4. Select **Other actions**.
- 5. Select any of the following:
 - No action: No action is performed when handset is not in call and placed in charger.
 - **Change profile**: When the handset is placed in the charger it changes profile. When the handset is removed from the charger, the profile is changed back.

Press **Edit** to select the wanted profile. By default only the profile Normal is visible, and additional profiles are visible only if they are configured.

• **Switch off**: When the handset is placed in the charger it will switch off. When it is removed from the charger it will switch on again.

If you enable the handset restrictions, the handset might not be switched off when placed in a charger.

• **Sound off**: When the handset is placed in a charger it is muted. When the handset is removed from the charger it switches the sound on again. When the handset is switched off in the charger, the system displays the Owner ID of the handset. This simplifies the identification of the handset. For example, when the handset is being charged with other handsets.

If you enable the handset restrictions, the handset might not be muted when placed in a charger

• **Logout**: When the handset is placed in a charger it is logged off. Call list and message list are deleted when the handset is logged out. When it is removed from the charger, the user needs to log in again.

This feature is applicable to Wireless Handset 3700 systems only.

Message absence: When an application or system sends a message to a handset, it
receives an indication that the handset is absent. If a handset is absent, the application
or the system determines if the message is sent to the handset or not, or redirected to
another handset.

If a message is sent from a handset, it does not receive an indication that the recipient is absent. This function must be programmed in the PBX to be able to redirect calls or messages.

You can configure additional **In charger** actions.

Chapter 6: Menu operation

Managing incoming calls

Incoming call

You get a call alert that is accompanied by a ring signal and / or a vibrating handset.

You can disable a ring signal and a vibrator. The handset number or name of the calling party is shown. The name is shown if the handset number of the calling party is stored in the local phone book.

Answering a call

Procedure

Do one of the following:

- Press the Off-hook () or the Accept soft key.
- Press 1 to answer the call using the speakerphone.
- Press the button on the Bluetooth headset to answer the call using the headset.

The name or number of the calling party is displayed if calling line information is available.

Note:

- You can set other answering methods, such as Automatically or Loudspeaking, through the Settings menu. When you enable Automatically, all incoming calls are connected automatically.
- If you decline the call, you can still acknowledge its receipt by sending a predefined text message to the caller.

Declining a call

Before you begin

Your handset must ring.

Procedure

Press the **On-hook and On/Off** () key or the **Decline** soft key.

Ending a call

About this task

Some systems or PBXs require that the handset sends a DTMF in order to end a call.

Procedure

To end a call, press the **On-hook and On/Off** (o) key.

Declining a call with a predefined message

About this task

To decline a call with a predefined message, both the caller and the call receiver must be connected via an Wireless Handset 3700 system.

Procedure

1. In response to the "Reply with a message template?" message prompt, press **Yes** to send a message to the caller.

A list of predefined messages is displayed in the **Templates** menu.

- 2. Select a predefined message and, if required, edit the message.
- 3. Press Send.

The handset displays the callers number.

4. Press **Send** again to send the message.

The handset displays the Message sent confirmation when the message is sent to the caller.

Answering a text message with a predefined message

Procedure

- 1. Press the soft key **Reply**.
- 2. Press the **More** soft key.

The **Templates** option is displayed.

3. Press the soft key **Select**.

A list of predefined message template is displayed.

- 4. Navigate to the required message template and press the **Select** soft key. If required you can edit the message.
- 5. Press the soft key **Send**.

The message sender's number is displayed in the handset display.

6. Press the soft key **Send**.

A "Message sent" confirmation is displayed and the message is sent to the caller.

Managing call list

Call list

You can see the last 25 received, dialled, or missed calls that are stored in the call list. If a phone number occurs more than once, the last time stamp and the total number of occurrences are listed. From the menu, you can see call list under **Calls** > **Call list**.

For users who use the devices like a DECT phone, a SIP client for PC, a desk phone, and others, the **Call list** is synchronizes on all the devices during the work shift.

Note:

The system administrator configures this feature.

The **Call list** synchronization is done when:

- · A handset starts up.
- · A call is ended.
- One or all entries are deleted manually from the Call list.

When the **Call list** synchronization starts, the Syncing call list message displays on screen until the update is complete.

You can manually close the dialogue using **Back** button, and in this case synchronization continues in the background.

If synchronization fails, an error message <code>Could not sync call list</code> is displays on the screen: In this case the Call list is not updated.

Note:

If **Call list** synchronization is enabled, successive calls of the same number will appear in series and is not be grouped.

Note:

If the solution is configured to H.323 protocol, the handset does not support multiple call history in call transfer or call conference.

Editing a number from the call list

Procedure

- 1. Press Menu.
- Select Calls.

- 3. Select Call list.
- 4. Select a number from the call list.

You can scroll the call list with the up and down arrows on the navigation key.

- 5. Press More.
- 6. Select **Edit number** to edit the selected number.

Saving a number from the call list

About this task

Saving a number in the call list creates a new contact. However, existing items in the call list are not updated with the contact information.

Procedure

- 1. Press Menu.
- 2. Select Calls.
- 3. Select Call list.
- 4. Select a number from the call list.

You can scroll the call list with the up and down arrows on the navigation key.

- 5. Press More.
- 6. Select Save number.

Sending a message from the call list

Procedure

- 1. Press Menu.
- 2. Select Calls.
- 3. Select Call list.
- 4. Select a number from the call list.

You can scroll the call list with the up and down arrows on the navigation key.

- 5. Press More.
- 6. Select Send message.

Deleting entries from the call list

Procedure

- Press Menu.
- 2. Select Calls.
- 3. Select Call list.

4. Select a number from the call list.

You can scroll the call list with the up and down arrows on the navigation key.

- 5. Press **More**, and then do the following as required:
 - To delete an entry: Select the entry to delete, and then press **Delete > Yes**.
 - To delete all entries: Press Delete all.

Viewing missed calls

About this task

By default the system displays the Missed call window and the **Missed calls** () icon.

The dialog window that appears for a missed call can be turned off. The handset can also be prevented from storing calls in the call list. The **Call list** can be used to ensure privacy for users sharing the same handset. These features require configuration in the handset via **WinPDM** or **Device Manager**.

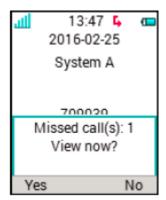


Figure 3: Missed calls

Procedure

The system displays a Missed call window and the **Missed calls** () icon.

1. To view the missed calls, press Yes.

The user presses No.

- 2. Press Menu.
- 3. Select Calls > Missed calls.
- 4. To scroll in the list, press up and down on the navigation key.
- 5. To call back, press Call.
- 6. **(Optional)** In a **Call list**, press **More** to view the time and date of the call, edit the received number, add to contacts, and delete the received number.

If supported by the system, the numbers contact name is displayed in the list.

Viewing the time of a call

Procedure

- 1. Press Menu.
- 2. Select Calls > Call list.
- 3. Select a number from the call list.

You can scroll the call list with the up and down arrows on the navigation key.

- 4. Press More.
- 5. Select **Time of call**. The time and date are displayed for the selected number.
 - Tip:

The duration of the last call is displayed under **Call time**.

Push-to-talk group call

The **Push-to-Talk** (**PTT**) feature is a group or conference call made to members of a predefined group . If one of the group members wants to contact the others, the member must press and hold

the PTT button to open the microphone. You can configure the **Multifunction** button to serve as the PTT button.

Because the multifunction button is larger than the **PTT** button and located on top of the handset, the user can locate it easily. The smaller **PTT** button is on the side of the handset. Specifically, users who need to wear gloves find the **Multifunction** button easier to use than the **PTT** button.

Some legacy systems or PBXs require that the handset sends a predefined DTMF tone when pressing or releasing .

To participate in the conference, the group members must first accept the invitation received as an incoming call. If a member declines the invitation, the member can rejoin the group or conference later. A member can also invite a group of members to participate in the conference call by calling a PTT group.

The support for the **Multifunction** button depends on the model of the handset used.

Accepting a PTT invitation as an incoming call

About this task

Use this procedure to accept a PTT invitation as:

- An incoming call
- · An incoming call during an ongoing call

If you receive an invitation during an ongoing call, it is displayed as an ordinary invitation. You can either accept or decline the invitation by pressing **Accept** or **Decline** respectively.

If you press **Accept**, the ongoing call is disconnected automatically and the PTT call is connected. Alternatively, the ongoing call can also get disconnected and the PTT call is connected if the following is fulfilled:

- The handset is configured to answer invitations automatically
- The user does not respond to the invitation within 10 seconds
- The invitation has higher priority than the ongoing call

If you decline the invitation, then you can rejoin the PTT call later.

A PTT invitation received as an incoming call is indicated by the **Push-to-talk** (



Procedure

Accepting a PTT invitation as an incoming call:

1. Press **Accept** or the **Off-hook** () key.

If you receive a PTT invitation during an ongoing call, you cannot accept or decline the invitation by pressing or or respectively.

By default, the handset starts in the inverted mute and loudspeaking modes, but you can configure it differently in a PTT group.

2. To open the microphone for transmitting, press and hold the **Push-to-talk** (N) button. When you release the **Push-to-talk** button, the microphone is muted again.

The **Multifunction** button can also be configured to function as the **Push-to-talk** button.

Accepting a PTT invitation as an incoming call during an ongoing call:

3. Press Accept.

The system disconnects the ongoing call and connects to the PTT call.

Accepting a PTT invitation as a message

About this task

Use this procedure to accept a PTT invitation that you receive as:

- A message
- A message during an ongoing call

When you receive an invitation, the system sends a warning signal before disconnecting the current call and connecting to the PTT call. A PTT message can contain up to 1000 characters.

Procedure

Accepting a PTT invitation as a message.

1. Press Accept.

Depending on the configuration of the invitation, the handset accepts the invitation automatically, and relays the message in inverted mute and loudspeaking modes.

2. To open the microphone for transmitting, press and hold the **Push-to-talk** () button. When you release the **Push-to-talk** button, the microphone is muted again.

Accepting a PTT invitation as a message during an ongoing call.

3. Press Accept.

The system displays the message.

Configuring a PTT call to connect directly

About this task

Use this procedure to connect to the PTT call directly when you receive the PTT invitation as:

- · An incoming call during an ongoing call
- · A message during an ongoing call

Procedure

To disconnect from the ongoing call and connect to the PTT call directly, ensure that:

- You have configured the handset to answer invitations automatically.
- You do not reject the invitation within 10 seconds.
- The invitation has higher priority than the ongoing call.

Declining a PTT invitation

About this task

Use this procedure to decline a PTT invitation received as:

- · An incoming call
- An incoming call during an ongoing call
- A message
- · A message during an ongoing call

Procedure

When you get an incoming call:

1. Press Decline.

The handset returns to the previous screen .

When you get a message:

2. Press Reject.

Calling a push-to-talk group

Before you begin

Define PTT groups.

Procedure

- 1. Press Menu.
- 2. Select Calls PTT groups.
- 3. Select a PTT group.
- 4. Press Call or the Off-hook () key.
- 5. **(Optional)** In the idle mode, press the **PTT** button quickly, select a PTT group, and then press the **Call** button.

Rejoining a push-to-talk group

About this task

When you reject or miss the PTT invitation that you receive as a call or a text message, then you can rejoin the PTT group by dialling:

- The Call list or Missed calls.
- Selecting the message from the Messaging inbox.

Procedure

You have received a PTT invitation as a call.

1. Rejoin the PTT group by dialling the **Call list** or the **Missed calls**.



You have received a PTT invitation as a message.

- 2. Rejoin the PTT group by selecting a message indicated by the **New message** (\boxtimes) icon in the **Messaging** inbox.
- 3. Press Call.

Managing calls in absentia

Call services

These functions are system dependent. Besides the default **Call services** functions, 10 extra system specific call services can be defined with or without automatic disconnection. The parameters are set up in the Portable Device Manager (WinPDM).

Absence handling

Procedure

1. Press Menu.

- 2. Select Calls.
- Select Call services > Absence.
- 4. Select the applicable absence reason in the list. The number of absence reasons (for example: "Lunch", "Meeting", "Trip", etc.) are configured in the WinPDM.

The code is defined when configuring the absence reason in the handset.

- 5. Press **Select**.
- 6. Enter time (HHMM) or date (MMDD) depending on the selected absence reason.
- 7. Press **OK**.

The handset sends an absence reason code to the system by establishing a call. The call is automatically disconnected after a few seconds. The following text is visible on the idle screen:

For example, 5016 > SAC (Send All Calls).

Where 5016 is the number of the handset configured for Absence Handling.

Deactivating the Absence settings

Procedure

- 1. Press Menu.
- 2. Select Calls.
- 3. Select Call services > Absence.
- 4. Select Deactivate.
- 5. Press Select.

Diverting calls

About this task

You can divert internal calls, external calls, calls when busy, and calls on no reply to another phone number.

Procedure

- 1. Press Menu.
- 2. Select Calls.
- 3. Select Call services > Divert calls.

You can create a shortcut to the **Call services** function or activate a call service when a profile is activated.

You can set the PBX settings for the call diversion to show the **Divert calls** menu in the handset.

4. Select Activate.

- 5. Select any of the following:
 - Internal or External: Diverts internal or external calls.
 - No reply: Diverts calls on no reply.
 - When busy: Diverts calls when the handset sends a busy tone or is on another call.
- 6. Enter the number (maximum 24 digits) to which you want to divert the calls. Alternatively, press the **Call Contact list** (*) to see the call contact list.
- 7. Press OK.

The handset sends a diversion reason code to the system by establishing a call. The call is automatically disconnected after a few seconds.

The code is defined while configuring the diversion reason in the handset.

Next steps

To stop diversion, select **Deactivate** and press **OK**.

The following text displays on the idle screen, for example, 5016 > 5018.

Here 5016 is the number of the handset configured to divert call to the extension 5018.

A diversion for Internal or External calls can be configured on PBX. The following text appears on the idle screen: 5016 >> 2001, (2002), where 2001 is the number to divert external calls, 2002 within the parenthesis is the number to divert internal calls.

If only one type is enabled, 5016 is used as an additional extension. This configuration is systemdependent, for details please refer to PBX documentation.

Stopping the diversion of calls

Procedure

- 1. Press Menu.
- Select Calls.
- 3. Select Call services > Divert calls.
- 4. Select any of the following:
 - Internal or External: Diverts internal or external calls.
 - No reply: Diverts calls on no reply.
 - When busy: Diverts calls when the handset sends a busy tone or is on another call.
- 5. Select **Deactivate**.
- 6. Press **OK**.

Emergency calls

If configured in the **WinPDM** or **Device Manager**, any one of up to five emergency numbers can be called. An emergency number can be called even if the handset or keypad is locked.

Managing Mid-call operations

During a call

When you call from a locked handset, there are limitations to what items in the **In Call** menu are visible. However, the entire menu is accessible when calling from a handset with locked keypad.

Adjusting the volume during a call

About this task

Use this procedure to increase or decrease the volume during an ongoing call.

Procedure

Do the following:

- To increase the volume, press the **Volume up** button on the upper left side of the handset.
- To decrease the volume, press the **Volume down** button on the upper left side of the handset.
- To adjust the volume, press up or down on the four-way navigation key.

The handset stores and keeps the new volume level.

Opening contacts during the call

About this task

Use this procedure to open contacts while you are on a call.

Procedure

- 1. Select More.
- 2. Select Contacts.
- 3. To open the contacts, select any of the following:
 - Call contact: For searching a local or company phone book contact.
 - Central phonebook: For searching a central phone book contact.
- 4. Press Select.
- 5. Select or search contact.

The selected contact can be called by pressing **Call**. When calling the contact, the first call is put on hold.

Opening messaging during the call

About this task

Use this procedure to open the **Messaging** menu during an ongoing call.

Procedure

- 1. Select More.
- 2. Select Messaging.

Muting or unmuting a call

- To mute yourself, do the following:
 - 1. Press **More** during the call.
 - 2. Select Microphone off.
 - 3. Press Select.

The icon indicates a silenced microphone. This means that the other party in an ongoing call cannot hear you.

- To unmute yourself, do the following:
 - 1. Press More during the call.
 - 2. Select Microphone on.
 - 3. Press Select.

the **Mute** (**N**) button. A short beep is also heard indicating that the microphone is turned on or off.

When you press the **Mute** (**>**) button in a PTT call, no beep is heard.

Transferring the audio

About this task

Use this procedure to transfer audio between the **Bluetooth** headset and the handset earpiece during the call.

Procedure

- 1. Select More.
- 2. Select Audio transfer.
- 3. Press Select.



Audio transfer is visible if Bluetooth connection is active.

Starting a new call during a call

About this task

Use this procedure to start a new call during an ongoing call.

Procedure

- 1. Press More.
- 2. Select New call.
- 3. Press Select.
- 4. Enter the number that you want to call or press the **Call Contact list** (*****□) icon to access the phonebook.
- 5. Press the **Off-hook** () key.

When the new call connects, the first call is put on hold.

Activating automatic callback

About this task

You can activate the automatic callback feature for an outgoing call from your handset when the called party is busy or does not answer the call. The DECT system calls you back when the called party becomes available to receive calls. When you answer the call, the called party receives the same call. The feature deactivates after you receive an automatic callback.

Note:

This feature is only applicable in an Avaya Aura® environment. The system administrator must enable this feature for your handset.

You cannot activate automatic callback for another call if the feature is still active for a previous call. You must deactivate the feature or receive the automatic callback before activating it for another call.

Procedure

- 1. When you hear the busy or ringing tone for the outgoing call, do one of the following:
 - Press 5 and wait until you hear the activation confirmation tone.

The default activation code for automatic callback is 5. Your administrator can change this code.

 Press More > Call back > Select and wait until you hear the activation confirmation tone.

The **Call back** option is visible only if your administrator defines it in WinPDM using the same activation code as in IPBS or IPBL.

The DECT system activates the automatic callback feature and starts monitoring the called party. The handset returns to idle mode.

You receive an automatic callback when the called party becomes available.

2. **(Optional)** When the handset is idle, press **#34#** to deactivate the automatic callback feature.

The default deactivation code for automatic callback is #34#. Your administrator can change this code.



Note:

Your administrator can define a soft key in WinPDM to deactivate automatic callback using the same deactivation code as in IPBS or IPBL. To deactivate, access the Call services menu while the handset is idle, select the designated soft key, and press Select.

Transferring a call by pressing a key

About this task

Use this procedure to transfer the first call with the second call when you have two ongoing calls.

Procedure

- 1. Press More.
- 2. Select Transfer.

The **Transfer** option is visible only when it is configured in the handset.

3. Press Select.

This connects the first caller with the new caller. Your call is automatically disconnected.

Transferring a call by dialing a number

About this task

You this procedure to transfer an ongoing call to a new call.

Procedure

- 1. Press More.
- 2. Select Transf. to new.

Transfer to new call is visible only when New call and Transfer are defined in the handset.

- 3. Press Select.
- 4. Enter the number of the person where the ongoing call is to be transferred or press the Call Contact list (* 1111) icon to access the phone book.
- 5. Press the **Off-hook** () key to transfer the call.

Starting a conference call

About this task

Use this procedure to initiate a conference call between several participants simultaneously.

Before you begin

A new call is started during the conversation.

Procedure

- 1. Press More.
- 2. Select Conference.
- 3. Press Select.

The person initiating the conference call is the conference leader, and the others are participant members of the conference call.

Toggling between calls

Before you begin

Start a new call.

Procedure

- 1. Press More.
- 2. Select Switch.

The **Switch** option is only visible if it is configured in the handset.

3. Press Select to switch to the other call.

Ending a call

Before you begin

A new call has been started during a conversation.

Procedure

- 1. Press More.
- 2. Select End Call.

The **End Call** option is visible only when it is configured in the handset.

3. Press Select.

The handset ends the current call and resumes the previous call.

Sending call waiting

About this task

Use this procedure to notify the engaged party that another call is trying to reach them.

Procedure

- 1. Press More.
- 2. Select **Call waiting**. The **Call waiting** function is visible, only if the administrator has activated in the handset.
- 3. Press Select.

The engaged party receives a **Call waiting** signal.

When the line is free it automatically calls the number again. This is system dependent function

Answering call waiting

About this task

Use this procedure to answer call waiting when you:

- Receive a short tone for another incoming call during an ongoing conversation.
- Receive a beep from the handset and a text display: Internal call for internal callers and External call for external callers. The handset also displays the name or the phone number of the second caller.

Note:

You can use **Answer call waiting** function in two different ways depending on the system setup and configuration.

Procedure

During a call, you receive a short tone. To answer the second call, do the following:

- 1. Press More.
- Select Answer call waiting.
- Press Select.

You connect to the new call and the first call is put on hold. When the line is free, the call on hold is automatically dialled again. This is a system dependent feature.

During a call, you receive a beep and a text display. To answer the second call, do the following:

4. Press Accept.

The system displays the text Switch briefly and transfers to the second call. The first call is put on hold.

5. To end the call with the second caller, press **More** > **End call**.

You disconnect with the second call and connect with the first call.

6. (Optional) Press Decline to reject a second call.

The second caller hears a busy tone, and the call is logged as a missed call in the handset.

Enabling DTMF

About this task

Some systems or PBXs require that the handset sends Dual Tone Multi Frequency (DTMF) when pressing the keys. Use this procedure to enable the **DTMF**.

Before you begin

You must be on a call.

Procedure

Do the following:

- Press More > DTMF > Select.
- Press the **On-hook and On/Off** () key, and then press and release the **Sound off** () button.

DTMF is visible only when it is configured in the handset.

DECT Info

DECT info is an advanced function intended for an administrator using the handset to measure the RF link and system parameters as part of a troubleshooting or site survey procedure.

This option is only visible if the **Admin** menu is activated.

Using the loudspeaker

About this task

Use the procedure to activate the loudspeaking function.

Procedure

Do any of the following:

• Press a **Multifunction** button, **Soft** key, **Hot** key, or a **Navigation** key and define it as a shortcut to a **Phone call** () function. When you press a key or a button, a predefined number is called.

The support for a **Multifunction** button, depends on the model of handset used.

- When receiving a call, press the soft key . The **Soft** key might have another or no function depending on its configuration of the **In call** function in WinPDM or Device Manager.
- During a call, press the soft key . The **Soft** key might have another or no function depending on its configuration of the **In call** function in WinPDM or Device Manager.
- During a call, put the handset in a charger. Requires that the **Loudspeaking** function is chosen in the **In Charger** menu.
- This function can also be activated by selecting another answering method, that is, **Automatically** and or **Loudspeaking**.

Sending data

About this task

Sent data can be used to initiate actions such as:

- Opening a door.
- Starting and stopping a machine.

Procedure

To send user entered data from the handset, do any of the following:

- Press pre-programmed hot key.
- · Press pre-programmed soft key.
- · Select a service.

The data can either be predefined, entered after the hot key or soft key is pressed, or send when the relevant service is selected.

Managing outgoing calls

Calling a number from contacts

Procedure

- 1. Press Menu.
- Select Contacts.
- 3. Select Call contact.
- 4. Select a contact from the list, or search a name or number by entering the characters in the **Search** field.
- 5. Press **Call** or the **Off-hook** () key.

Calling a contact from the local or company phonebook

Procedure

- 1. Press Menu.
- 2. Select Contacts.
- 3. Select Call contact.

The local and company phone book contacts appears in the same list. The company names are indicated by the **Locked entry** (icon for identification.

- 4. Select a contact from the list, or search a name or a number by entering the characters in the **Search** field.
- 5. Press **Call** or the **Off-hook** () key to call the contact.
- 6. **(Optional)** Using **View > More**, you can edit the contacts from the local phone book and send a message.

Calling a contact from the central phone book

Procedure

- 1. Press Menu.
- Select Contacts.
- 3. Select Central phonebook.
- 4. (Optional) Change the selected directory.
- 5. Search for a contact in any of the following ways:
 - a. **Search by name**: Enter the first name and the last name or both.

You can enter incomplete names and names that include spaces.

- b. Search by number: Enter the number.
- Press Search.

The system displays the search results.

- 7. **(Optional)** Press **More search results** to display more contacts if the number of matching entries are more than 25.
- 8. (Optional) To view the last search results, select Central phonebook > Last result.
- 9. Press **Call** or the **Off-hook** () key to call the contact.

Making a local call

Procedure

- 1. Enter the number.
- 2. Press Call or the Off-hook () key.

The system displays the number while dialling.

- 3. (Optional) Do the following as required:
 - To erase the number, press Clear.
 - To step, add or delete the digits from the middle of a number, use the navigation key.

Making an international call

Procedure

- 1. Enter a + character followed by the country code and the local number. To enter the + character, long press the **0** key until the system displays the character.
- 2. Press Call or the Off-hook () key.

The system displays the number while dialling.

- 3. (Optional) Do the following as required:
 - To erase the number, press Clear.
 - To step, add or delete the digits from the middle of a number, use the navigation key.

Dialing a number with the headset button

Procedure

If a headset is used, use the **Headset** button to obtain a dial tone and dial the last number.

Ensure that the headset is configured using the **WinPDM** or **Device Manager**.

Dialing using a pre-programmed number

About this task

You can programme the following with a handset number:

- Navigation keys
- Hot keys
- Soft keys
- Multifunction button

A **Headset** button can also be programmed with a handset number as long as it has been configured by the administrator via the WinPDM or Device Manager.

Procedure

To dial a pre-programmed number, press the pre-programmed key or button.

The call is connected automatically.

Dialing a number from the call list

About this task

Use this procedure to dial a number from the call list when the handset is in the idle mode.

Procedure

- 1. Press Menu.
- 2. Select Calls.
- 3. Select Call list, and then select a number.

The system displays the call list that you can scroll using the navigation key up and down.

4. Press **Call** or the **Off-hook** () key to dial the selected number.

Dialing last called number with the headset number

Procedure

If a headset is used, use the **Headset** button to dial the last called number.



Note:

Ensure that the headset is configured via the **WinPDM** or **Device Manager**.

Managing contacts

Contacts

The handset has a local phone book with 250 entries, where you can add, delete, and edit names and numbers freely. The phone book lists all names in alphabetical order, where you can add three numbers for each contact: work number, mobile number, and other number.

You can also access a central phone book which is system dependent. You can send a request to a messaging server with the first characters entered, and the messaging server returns a list of names and numbers that matches the search.

In addition, a company phone book with up to 1000 entries can be downloaded to the phone via the WinPDM.

You can download a company phone book through the PDM. It is not possible to edit or delete a company phone book contact. These contacts are indicated by the **Locked entry** (icon before their name. The contacts will include only the work number.

When searching for a contact, the input language can be temporarily changed by long pressing the **Key lock**, and **Upper and Lower case** (* 1). This can be used to temporarily access characters in a foreign language.

Adding a new contact

- 1. Press Menu.
- Select Contacts.
- 3. To add a new contact, select **Add contact > New**.
- 4. Select **Name** and press **Add**.
- 5. In the **Name** field, enter the name for the contact, and then press **OK**.
- 6. Select one of the following:
 - Work number
 - Mobile number
 - Other number
 - Ring signal
- 7. Press Add.

8. Enter the numbers.

The administrator can add a variable or the character "U" to the **Work number**, **Mobile number**, or **Other number** field to allow users to enter additional numerical characters before calling the number.

You can set a specific ring signal for each contact.

- 9. Press **OK**.
- 10. Press Save.

Adding a contact from the call list

Procedure

- 1. Press Menu.
- 2. Select Contacts.
- 3. Select **Add contact > From call list**, and then select a number from the call list.
- 4. Press Add.
- 5. Select any of the following:
 - Work number
 - · Mobile number
 - Other number
 - Ring signal: You can set a specific ring signal for each contact.
- 6. Press Add.
- 7. Enter the name for the contact, and then press **OK**.
- 8. Press **OK**.

If the Force stimuli ringing is enabled, the handset uses the system-provided ring signals instead of the local ring signals. This function is applicable in legacy systems only (stimuli).

9. Press Save.

Editing a contact

About this task

Use this procedure to edit local contacts.

- 1. Press Menu.
- 2. Select Contacts.
- 3. Select Edit contact.
- 4. Select the contact, and press **Edit**.

- 5. Select any of the following:
 - Name
 - Work number
 - Mobile number
 - · Other number
 - Ring signal
- 6. Press Edit, and then enter the new name or number or select the new ring signal.

The administrator can add a variable or the character "U" to the **Work number**, **Mobile number**, or **Other number** field to allow users to enter additional numerical characters before calling the number.

- 7. Press OK.
- 8. Press Save.

Deleting a contact

Procedure

- 1. Press Menu.
- 2. Select Contacts > Delete contact.
- 3. Select the contact that you want to delete, and then press **Delete**.
- 4. Press Yes to confirm.

It is not possible to delete a company phonebook contact. These contacts are indicated by the **Locked entry** $(\stackrel{\triangle}{\Box})$ icon before their name.

Setting a ring signal for a contact

Procedure

- 1. Press Menu.
- 2. Select Contacts.
- 3. Select Add contact or Edit contact.
- 4. Select Ring signal.
- 5. Select the ring signal to be used for the contact.
- 6. Press Back.
- 7. Press Save.

Central phonebook

You can search for users by their name or phone number in the following directories of the central phone book:

Enterprise

- Enterprise frequent
- User
- Group
- Group frequent

The **User** directory is the default directory. When you change the directory, the selected directory becomes the default directory. When you remove a handset subscription, the **User** directory becomes the default directory.

When the search result is displayed, press **More** to view the contact information and the number added to the new contact. Press **Call** or the **Off-hook** () key to call the contact.

Searching by name

Procedure

- 1. Select Central phonebook.
- 2. Select Search by name.
- 3. Enter First name or Last name, or both in the search field.
- 4. Press Search.

The system displays the search results.

5. Press **More search results** to display more contacts if the number of matching entries are more than 25.

Searching by number

Procedure

- 1. Select **Central phonebook**.
- 2. (Optional) Change the selected directory.
- 3. Select Search by number.
- 4. Type the phone number of the user.
- 5. Press Search.

The system displays the search results.

6. Press **More search results** to display more contacts if the number of matching entries are more than 25.

Viewing last search result

Procedure

- 1. Select Central phonebook.
- Select Last result.

The system displays recently viewed entries.

For example, if the number of matching entries are 30 and the user selects **More search results**, then the five remaining entries are displayed in the last search result.

Managing shortcuts

Shortcuts

Using the Shortcuts menu, you can set predefined functions as shortcuts for the soft keys, hot keys, navigation keys, and the multifunction button. For example, you can define the soft key as a shortcut to make a call or send a message.

Note:

If you create a shortcut to the "Phone Call" function, you can add a variable/character "U" in the "Enter Number" field that allows users to enter additional numerical characters before calling the number.

Defining soft keys

Procedure

- 1. Press Menu.
- 2. Select Shortcuts.
- 3. Select Soft keys.
- 4. Select one of the following:
 - Left
 - Middle
 - Right
- 5. Enter a name for the soft key, and then press **OK**.
- 6. Select Function.
- 7. Select a function from the list, and then press **Back**.
- 8. Select **Value**(only for some of the functions), and press **Select**.
- 9. Enter a value (for example, a number), and then press **Back**.
- 10. Select Control question and press Select. The default is Off.
- 11. Press Back.
- 12. Press Save.

Defining hot keys

- 1. Press Menu.
- 2. Select Shortcuts.
- Select Hot keys.
- 4. Select from 2 to 9.

- 5. Select Function.
- 6. Select a function from list, and then press **Back**.
- 7. Select Value (only for some of the functions), and press Select.
- 8. Enter a value (for example, a number), and then press **Back**.
- 9. Select Control question and press Select. The default is Off.
- 10. Press Save.

Defining navigation keys

Procedure

- 1. Press Menu.
- 2. Select Shortcuts.
- 3. Select Navigation keys.
- 4. Select any of the following:
 - Up
 - Down
 - Left
 - Right
- 5. Select **Function** and press **Select**.
- 6. Select a function from the list, and then press **Back**.
- 7. Select Value (only for some of the functions), and press Select.
- 8. Enter a value (for example, a number), and then press **Back**.
- Select Control question and press Select. The default is Off. Press Back.
 If the control question is enabled, the system displays the message: Press "Yes" to proceed.
- 10. Press Save.

Defining the multifunction button

Procedure

- 1. Press Menu.
- 2. Select Shortcuts.
- 3. Select Multifunction.

The support for this feature depends on the type of model used.

- 4. Select Long press or Multi press.
- 5. Select **Function** and press **Select** to select function.

- 6. Select a function from list, and press **Select**, then press **Back**.
- 7. Select Value (only for some of the functions), and press Select.
- 8. Enter a value (for example, a number), and then press **Back**.
- 9. Select Control question and press Select. It is disabled by default.
 - If the control question is enabled, a dialog box is displayed when you press the defined soft key. The dialog box displays the following message: Press "Yes" to proceed.
- 10. Press Save.

Managing My favorites

Adding to My favorites

Procedure

- 1. Press Menu.
- 2. Select My favorites.
- 3. Select Add new.
- 4. In the **Name** field, enter a name for the favorite.
- 5. Press OK.

The system displays the **Function** menu.

- 6. To navigate to the required function, press up and down on the navigation key.
- 7. Press **Select** or the confirmation button on the navigation key.
- 8. **(Optional)** If required enter values in the fields. This is applicable to only some of the fields
- 9. Press Back.

Editing My favorites

- 1. Mark the name in My favorite by pressing the navigation key up and down.
- 2. Press More.
- 3. Select Edit.
- 4. Edit the parameters.
- 5. Press Back.

Deleting My favorites

Procedure

- 1. Mark the name in My favorite by pressing the navigation key up and down.
- 2. Press More.
- 3. Mark **Delete** by pressing the navigation key up and down.
- 4. Press Select.
- 5. Press Yes.

Managing messages

Message List

The thirty last received messages are stored in a list. The message list is located in the **Messaging** menu **Inbox**. Time and date information is included in the message. If a message is received when the inbox already contains thirty messages, the message in the inbox with the oldest time and date is automatically replaced by the newly received message.

Inbox

Reading a stored message

Procedure

- 1. Press Menu.
- 2. Select **Messaging**.
- 3. Select **Inbox** to view the message list.
- 4. Select a message, and then press View.

You can scroll the message list with the up and down arrows on the navigation key.

Replying to sender

- 1. Press Menu.
- 2. Select Messaging.
- 3. Select **Inbox** to reply to the message.
- 4. Press Reply.
- 5. Write your message, and then press **Send**.
- (Optional) If required, edit the number to the receiver and press Send.

Deleting a message

Procedure

- 1. Press Menu.
- 2. Select Messaging.
- 3. Select **Inbox** to view the message list.
- 4. Select a message that you want to delete, and then press More.

You can scroll the message list with the up and down arrows on the navigation key.

5. Select **Delete**, and then press **Yes**.

The system deletes the message.

6. (Optional) To delete all messages in the list, select Delete all and press Yes.

Forwarding a message

Procedure

- 1. Press Menu.
- 2. Select Messaging.
- 3. Select **Inbox** to view the message list.
- 4. Select the message that you want to forward, and then press **View**.

You can scroll the message list with the up and down arrows on the navigation key.

- 5. Press More.
- 6. Select Forward.
- 7. **(Optional)** If required, write additional text.
- 8. Press Send.
- 9. Enter the number of the receiver or press the middle soft key to open the phonebook.
- 10. Press **Send** to forward the message.

Calling the sender of the message

- 1. Press Menu.
- 2. Select Messaging.
- Select Inbox.
- 4. Select a message.
- 5. Select View.
- 6. Press More.
- 7. Select Call Sender.

Calling while reading a text message

A user can make a call while reading a text message to review and discuss the message with the called party. The called party may be either:

- The message sender, that is, the same party that sent the text message.
- A different party.

The user can activate the loudspeaker function during the call to make it easier to read the received text message while talking to the called party.

Calling a different party

About this task

Use this procedure to call another party to read and review a received text message.

Procedure

- 1. Open the message and press the **More** soft key.
- From the pop-up menu, navigate to the Call menu item and press the Select soft key. The pre-dial screen is displayed. Enter the number of the party to be called or select a number from the handset call list or local or central phone books.
- 3. Press the **Call** soft key and wait for the called party to reply. The message is replaced by the ongoing call detail. The user can do any one of the following:
 - Continue with the call without referring back to the received message.
 - Redisplay the message and continue the call to further review and discuss the message.
 - Redisplay the message and terminate the call.

Calling a number in a message

- Press Menu.
- 2. Select Messaging.
- 3. Select **Inbox** to view the message list.
- 4. Select a message, and then press View.
- 5. Do any of the following:
 - a. Press More, and then select Call no. in text.
 - b. Press the **Off-hook** () key.
- 6. If the message contains several numbers, then select the number that you want to call from the list.
- 7. Press Call or the Off-hook () key.



Note:

If the sender has written a number in the message, the number can be called without dialling. This option is only visible if the number consists of minimum 3 digits.

Saving a number in a message

Procedure

- Press Menu.
- Select Messaging.
- 3. Select **Inbox** to view the message list.
- 4. Select a message, and then press **View**.
- 5. Press More, and then select Save number.
- 6. Select any of the following:
 - Work number
 - Mobile number
 - Other number
- Press Add.
- 8. Enter the name for the contact, and then press **OK**.
- Press Save.

Message templates

Predefined messages contained in message templates can be used in a number of different situations to quickly construct a message rather than having to construct the message completely from scratch. Up to five predefined messages can be configured for the handset in the WinPDM/ Device Manager. This lets the user select and send a message appropriate to the current situation, such as "I am in a meeting" or "I am in the operating theatre".

Before a message is sent, the user may edit, add, or remove text from the message. For example, the message "I am in a meeting" could be appended with " - please call back after 1500".

The message template function can be used in the following contexts:

- When a call is received that the user wishes to decline, but still acknowledge with a message, without having to type a completely new message.
- When a text message is received that the user wishes to answer with a text message without having to type a completely new message.
- When the user is writing a message using the handset Messaging function without having to type a completely new message.

Accessing templates

About this task

Use this procedure to a access a template.

Procedure

- 1. Open the **Templates** menu as described in the context in which the template is being used.
- 2. Select the required message from the **Templates** menu.
- 3. To edit the message, use the handset navigation key to move to different parts of the message, the handset key pad to add additional text, and the Clear soft key to delete unwanted text.

Write and send a message overview

A message can be constructed from scratch, or from a predefined template that can be used as it is or edited. The maximum message length is normally 160 characters but may be less depending on the character set used. The first character entered is always upper-case, followed by lower-case character. However, this may be overriden by pressing the * -key before entering the character.

When pressing a key, the first available character for that key is displayed. To enter the other characters supported by the key, press the key until that character appears in the display.

The keys 0-9, * or # can be used. Keys 0 and 1 contains special characters. For example, to enter the character E, press key 3 twice. E appears in the display and is selected after a timeout or when another key is pressed.



Tip:

If the system supports UTF-8 character encoding, the input language can be changed temporarily by long pressing. This can be used to temporarily access characters in a foreign language.

To delete a character, press Clear.

Writing a new message

Procedure

- 1. Press Menu.
- 2. Select Messaging.
- 3. Select Write new message.
- 4. Write the message from scratch or select a message template by pressing the More soft key and, if required, edit the message.



Note:

The **More** key is not displayed if no message templates have been defined.

- 5. When the message is complete, press **Send**.
- 6. Enter the call number.
- 7. Press **Send** to send the message.

Sent messages

Reading a sent message

Procedure

- 1. Press Menu.
- 2. Select Messaging.
- 3. Select **Sent** to view the list of sent messages.
- 4. Select the message that you want to read.

You can scroll the message list with the up and down arrows on the navigation key.

5. Press View to read the message.

Forwarding a sent message

Procedure

- Press Menu.
- 2. Select Messaging.
- 3. Select Inbox or Sent.
- 4. Select message.
- 5. Press More.
- 6. Select Forward.
- Press Send.
- 8. Enter the number.
- 9. Press Send.

Received messages

Receive a message

When a text message is received, the message alert signal sounds. The **New message** icon, and the content of the received message are automatically displayed. The icon remains in the display until all new messages are opened. If the message is received during a call, a beep notifies the user.



Note:

If the phone is locked with a PIN, the user must unlock the phone to access a received

Using the handset soft keys and menu selections, a received message can be replied to or forwarded to another party. The sender of the message can be called and a call number can be included in the message text. While reading a received message, the user can return to the **Inbox**, review the current inbox content and then return to the message being read. A received message can be read later by selecting **Close**. A received message is stored in the **Inbox**.

Receive a message with request for an answer

In the status bar, a message with request for answer is indicated the same way as an ordinary



message. In the message list, the message with request for answer is indicated by the icon.

Accepting or rejecting a message

Procedure

Press the **Accept** or **Reject** soft key.

The option **Delete** is not available for a message with request for answer. An unacknowledged message can only be deleted from the message list.

When an acknowledged message has been replied to, the icon **Read message** () is shown in the message list. The text **Accepted** or **Rejected**, and time and date is also added in the acknowledged message.

Reviewing inbox content while reading a message

Procedure

- 1. While reading a received message, press the **More** soft key.
- 2. Select **Inbox** from the pop-up menu.

The system displays the inbox containing message summaries.

3. Press **Back** to return to the message you were reading.

Enhanced messaging

Message queuing and message priority

To notify you about new incoming messages, all incoming messages are placed in a message queue. The sorting order for the message queue depends on the system settings. By default, the messages are sorted first as per their priority and thereafter as per their arrival time.

The messages in the message queue are automatically displayed for 20 seconds until all the messages have been displayed. You can extend the time to display a message by pressing any button. You can also close a message to immediately see the next message in the message queue.

The messages that you do not close are put last in the message queue and remain in the message queue until you close them. They are shown as "unread" in the message list and will not be shown as "read" until you have closed them.

Message priority and call priority

As per the default settings, the call information dialog box is always visible in front of a message on incoming calls. You can configure a message with a certain priority to ensure that it is always displayed without being interrupted by a call. When you configure a call priority, the handset compares the call priority with the message priority to determine which information to be displayed, that is, the call information dialog box or the message. If the message priority and the call priority are equal, then the message is displayed.

Interactive messaging

Interactive Messaging (IM) is a function that extends basic messaging. It lets a handset user interact with a server application in the system.

An example can be machinery or equipment that can be accessed from the handset or a personnel calling application. A list of actions can be included in the message sent from the application to the handset.

Note:

The support for this feature is dependent on the model of the handset that is used.

An IM is indicated and viewed the same way as an ordinary message. It is saved along with other messages in the message list.

Note:

An IM is indicated and viewed the same way as an ordinary message. It is saved along with other messages in the message list.

When an IM has been read, the IM may display several options. Mark the one required and press **Select**. If the selected option requests input, enter the information needed and press **OK**. A press on the *-key changes to digit or text input mode depending on whether it is digit or text format in the message. A read message is indicated the same way as an ordinary message.

Note:

If a handset receives an IM update when the original message already has been deleted, the handset automatically sends a negative acknowledge (NAK) to the system, if requested.

The options for an IM depends on the configuration in the client application.



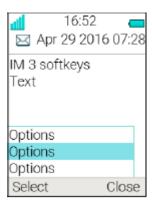


Figure 4: Example of an interactive message

Mobile data from the handset can initiate the application to send the interactive message.

Message indication repetition

The handset can be configured to repeat the audio and visual message received alert. The alert repeats every seven seconds until the user reads the message or turns the alert off. Certain system-defined properties can be assigned to a message to give it a high priority, for example, an alarm priority message.

Alert repeats start automatically when a high priority message is received. Such messages do not need to be explicitly configured to trigger alert repeats. A high priority alert is repeated every 10 seconds for a maximum of 5 minutes and then the alert stops. Alerts continue to be repeated until the user presses the hook-on, mute button or soft key for accessing the message. Note that message indication repeat is a system dependent feature that cannot be activated from the handset.

Color messaging

You can send color messages to handsets. The application that you use to send a message determines the color of the message. Color messaging is useful for categorizing messages.

In the following figure, there are two colored messages (a new message, and a read message) in the Inbox (left image in the figure). The messages are indicated by a gradient color bar behind the envelopes. In addition, a gradient color bar is shown below the envelop when reading a colored message (right in the figure).

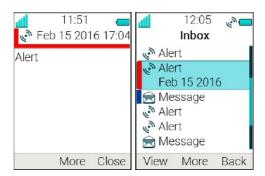


Figure 5: Examples of color messages

Redisplaying the message

About this task

Use this procedure to:

- Redisplay the message while the call is ongoing
- Terminate the call and redisplay the message.

Procedure

- 1. While the call in ongoing, press **More**.
- 2. Select Messaging > Inbox.

The system displays the received message summary.

- 3. To display the message in full, press **View**.
- 4. **(Optional)** Use the four-way navigation key to scroll up and down a long text message to reveal the content while reviewing and discussing the message with the called party.
- 5. **(Optional)** To terminate the call and redisplay the message, press the **On-hook and**On/Off () key.

Mobile data

Sending mobile data

About this task

Mobile data can be used for:

- · Opening a door
- Starting or stopping a machine

User entered data can be sent from the handset by pressing a pre-programmed **Hot** key or **Soft** key, or selecting a **Service**.

Procedure

Data can be predefined or entered only after you:

Press the Soft key, the Hot key, or select a Service.

Sending mobile data with a prefix

About this task

Mobile data with prefix can be used to send information to an application in the system.

The prefix is predefined by the user when programming the **Hot** key or **Soft** key or **Service**.

Procedure

To send the mobile data from the handset, enter the data and then press:

A pre-programmed Hot key or Soft key, or select a Service.

Voice mail

Receiving a voicemail

About this task

When you receive a voicemail, it is indicated by the **Voicemail message** (oo) icon in the status bar, and the phone screen automatically displays the content of the voice mail notification.

Information is stored in the **Messaging** inbox until you listen to all the voicemail messages.

Procedure

- 1. To dial the voicemail, press Call.
- 2. **(Optional)** If you press **Close**, dial the voicemail by long pressing on digit key **1** in standby mode or from the **Inbox** menu.

Checking the voicemail inbox

Procedure

- 1. Press Menu.
- 2. Select Messaging.
- Select Inbox.
- 4. Select the voicemail message and press View.
- 5. Press Call.

Voicemail is displayed with one entry in the message list regardless of the number of voicemail received.

One key voicemail access

Procedure

To access voicemail in the standby mode, long press the digit key 1.

If the extension number is not available, the system displays the "Voice mail number not defined" message.

Some systems require that the mailbox extension number is downloaded to the handset.

Managing profiles

Profiles

Setting up customized profiles is useful when there are many users on the same handset and who want different sound profiles.

You can set your own customized profiles for:

- Incoming calls
- Message alerts
- · Vibrating alerts
- Key sounds

You can also use customized profiles for temporary settings such as incoming calls must be silent while in a meeting.

You can switch between different profiles.



Note:

Changing settings is not possible on a handset which is set to a profile. You have to leave the profile before.

You can access profile from the menu by selecting **Profiles > Select**.

Adding a new profile

Procedure

- 1. Press Menu.
- Select Profiles.
- 3. To add a new profile, select **Add new**.
- 4. Enter the name for the new profile, and then press **Save**.
- 5. To add settings to the profile, press **More > Add setting**.
- 6. Select the setting you want to add to the profile.
 - Repeat steps 6-7 if you want to add additional settings.
- 7. (Optional) To add settings by importing from an available profile, press More > Import from, and then select the available profile.
- 8. Mark the required setting and press **Edit** to make the changes.

Activating a profile

Procedure

1. Press Menu.

- Select Profiles.
- 3. Select a profile from the list to activate it.

When a profile is activated, the **Profile active** () icon and the name of the profile are displayed in idle mode.

Deleting a profile

Procedure

- 1. Press Menu.
- 2. Select Profiles.
- 3. Select the profile that you want to delete, and then press **More**.
- 4. Select **Delete** from the menu, and then press **Yes**.

Editing a profile

Procedure

- 1. Press Menu.
- 2. Select Profiles.
- 3. Select the profile that you want to edit, and then press **More**.
- 4. Select Edit.
- 5. Do one of the following:
 - Edit the setting by marking it and then press **Edit**.
 - Add additional settings by pressing More, and then selecting Add setting or Import from.
 - Remove a setting by marking it and then selecting More and then Remove setting.

Alarm operation

The support for the system dependent features are dependent on the model of the handset used.

If a shared phone is used, it must be logged in to the system to be able to send an alarm.

Activating an alarm

About this task

You can always trigger the alarm when you are speaking, editing your settings, or while the handset is locked.

Procedure

To activate the alarm, press the alarm button twice within two seconds.

User can set a parameter through the **WinPDM** or **Device Manager**.

The system displays an information text Personal alarm.

The alarm is sent to the alarm server that distributes it further. After that the handset returns to stand-by mode.

Acoustic location signal

An alarm can be followed by an Acoustic Location Signal (ALS). The ALS is a signal from the handset that sounds for a predefined period of time. The signal is silenced by pressing the **Mute** button on the handset.

Testing the alarm

Procedure

Press and hold the alarm button until the system displays the information text Test Alarm.

Alarm with location information

Information about the handset's location can be sent along with an alarm. The location can be added as follows:

- · Manually added by the user
- An approximately location given by the closest Base Station.

Alarm with data

The data must manually be defined and stored by the user. To use the function, one Soft or Hot key or Navigation key in the handset must be defined as a shortcut to the menu **Edit alarm data**. The stored data is added to all types of alarm at transmission.

Automatic call after alarm

A handset can be configured to call a predefined number after an alarm has been sent. If configured, it is also possible to call the predefined number without sending an alarm by pressing the push-button. Depending on the settings, the call can be established in the following modes:

- · Loudspeaking mode
- Normal mode
- Monitor mode

Procedure call

About this task

When configuring the functions **Call services**, **In call** menu, **Contacts**, or a shortcut or service to the **Phone call** function, the data added in these functions is static. When entering the data for the function to be used, it is possible to add a variable or character U that allows the user to enter additional numerical characters before calling the number or sending the data to a system.

Example of configuration:

A user wants to create a service with the Phone call function. The PBX requires that a prefix must be added to a phone number. In this case, the user can pre-program the prefix and then enter the applicable phone number when using the Phone call function.

Procedure

- 1. Press **Menu**, or the confirmation button.
- 2. Select My favorites.
- Select Add new.
- 4. In the Name field, enter Call no and press OK.
- 5. Select the function Phone call.
- 6. In the **Number** field, enter the prefix to be used followed by the character U. In this case, the text string is as follows *21*U. The character U represents an Enter number dialog where the user can enter the phone number.
- 7. Press Save.

When using the function, an Enter number dialog appears, see figure below. If the user enters 123 (or selects a contact with this number by pressing the Call Contact list (*!!) and presses **OK**, the number *21*123 is dialed. Note that no call is established before the user presses **OK**, that is, post-dial.



Figure 6: Enter number dialog.



🛂 Note:

Using a shortcut to make a procedure call is not supported while the handset is locked.

System Profiles

A system profile is used to restrict a user from changing certain settings in a handset. The settings require configuration in the WinPDM or Device Manager and include alarm settings, soft key settings and presence settings. When the system profile is activated, the settings are not displayed in the menu of the handset.

A system profile can be made active in the handset by showing its profile name in idle mode. The system profile can be used in combination with the user profile. If there is conflict between the settings in the system profile and the settings in the user profile, the settings in the system profile are used. If a user changes a setting in the handset menu that is determined by a system profile, the menu is updated but the setting is not changed. If a system profile is to be permanently activated, it is recommended to hide the soft keys menu in the handset. The support for this feature is dependent on the model of handset that is used.

Example

For example, in the left-hand view of figure, a system profile has been activated and is indicated by the system profile name "Sys Profile SK1" shown in the handset in idle mode. In this case, the soft key "Inbox" and middle soft key "PTT 4" are determined by the system profile settings. If a user, for example, attempts to change the middle soft key name to "PTT 5", by using the handset menu **Shortcuts** > **Soft keys** > **Middle** (middle view in figure), the soft key shows "PTT 5" and the setting can be saved. However, the system profile settings are not overridden. When the handset returns to idle mode, the system profile settings are redisplayed, showing "PTT 4" instead of the user changed "PTT 5" (right-hand view in figure).



Figure 7: System profile overrides settings changed by the user

System Profiles Status Indications

The administrator can configure the handset to play a sound if the system profile is activated or deactivated. This provides the user with an audible alert when the system profile changes from inactive to active or vice versa. The feature can be triggered by several kinds of events, such as moving between different parts of a buildings where a system profile might be appropriate in one location but not required in another. The system profile name is displayed when the handset is in idle mode. The user should be aware that the characteristics and behaviour of the handset change when the system profile changes.

Advanced Functions

Admin menu

The system administrators can use the hidden menu in the handset for administration.

The **Admin menu** contains:

- Software, hardware, license information, IPEI/IPDI, and user ID
- DECT link and system information
- Centralized Management status
- · Site Survey Tool for indication of radio signal and base station listing

- Fault logging
- Enhanced system menu with ability to alter protection
- · Frequency band selection
- Factory reset option

To activate the **Admin Menu**, enter **Settings > Device info > Software** and press the buttons containing CRAFT#, that is **27238#**.

The **Admin Menu** disables after rebooting the handset.

For quick access to the Device Information (DI) menu in idle mode, press the keys containing *#DI# (that is *#34#). For quick access to IPEI/IPDI, press *#06# in idle mode. See the table below.

Information	Code
Software version	*#34#
Hardware version	*#34#
IPEI/IPDI	*#34# or *#06#
User ID	*#34#

Clearing lists in charger

You can set a parameter through the WinPDM or Device Manager to clear messaging lists and call lists that has been stored in the handset.

When the parameter is activated and the function has been downloaded to the cordless telephone, the lists are deleted when located in a charger. This feature can be useful during administration of handset for new users.

Troubleshooting

Operational problems

Fault	Probable cause	Action or comment
No display	The battery level is low or the handset is defective.	Charge the battery or contact system administrator.
No ringing	Sound off is on, or ringer volume set to silent, or the handset is defective.	Long press Sound off , or increase volume, or contact system administrator.

Table continues...

Fault	Probable cause	Action or comment
No change in time and date setting	PBX dependent.	Changes in the handset appear after a maximum of 24 hours after a change in the system or by turning the handset off and on again.
Cannot mute handset by long pressing Sound off or Mute	A handset restriction preventing the user to silence the handset.	Enable the parameter Possible to turn off sound.
Not possible to set the ring volume to Silent .		
Handset, with In charger > Other actions > Sound off enabled, is not muted when located in charger.		
Cannot switch off handset by long pressing On-hook .	A handset restriction preventing the user to switch off the handset.	Enable the parameter Possible to switch off handset.
Handset, with In charger > Other actions > Sound off enabled, is not switched off when located in charger.		

Error or warning messages

Display shows	Probable cause	Action or comment
No access	The network is in range, but no access rights.	Switch handset Off and then switch it On again or contact system administrator.
No System. The handset beeps once a minute (during max 30 minutes) with a low tone followed by a high tone (if enabled, the	The handset is out of coverage or handset is defective.	Stop the beep with Sound off and go into range.
		Note:
vibrator also follows the beeps).		When re-entering the coverage area it can take a couple of minutes before the handset automatically has registered into the system or contact system administrator.
No flash driver was found	Failed to read from flash.	Send the handset for service.
* Note:		
This display message is only shown in English.		

Table continues...

Display shows	Probable cause	Action or comment
Service needed Hardware error Note: This display message is only shown in English.	There is a communication problem between components in the handset.	Restart the handset. If the problem persists, send the handset for service.
Service needed Invalid IPDI Note: This display message is only shown in English.	Easy replacement procedure not followed correctly or failure during easy replacement procedure.	Send the handset for service.
Service needed Parameters corrupt. Note: This display message is only shown in English.	The handset is defective.	Select Reset on the middle soft key if available or if no Reset option is available or fault does not resolve, the handset needs repair. Note: Display message only shown in English.
Enter PIN code	The lock of the handset is activated.	Enter the required PIN code. If PIN code lost enter new via PDM/ Device Manager or do a factory reset via PDM/Device Manager.
Battery low, charge now	The battery level is low.	Charge or replace the battery.
Phonebook is not available at the moment.	The phone book does not respond, not available at the moment.	Try again later or if fault persists do a factory reset via the Admin menu or PDM/Device Manager.
Voice mail number not defined	There is no Voice mail number defined in the handset.	Define a Voice mail number via PDM/Device Manager.
Could not encrypt connection	The parameter Encryption Required is enabled in the handset in combination with; 1. Unencrypted base station(s); and/or, 2. Unsupported base station(s).	 Disable the Encryption required parameter in handset via PDM/Device Manager; and/or, Enable the encryption in the base station(s); and/or,

Table continues...

Display shows	Probable cause	Action or comment
Not allowed 1. The user cannot logout from the handset due to incorrect password (AC code). 2. The extension (User) does not exists. 3. The password is not correct.	 Enter #11*<ac code=""># on the keypad and press Off-hook to logout from the handset.</ac> Make sure that you entered correct extension. If needed, contact the system administrator. 	
		Make sure that you have entered correct password. Ask the system administrator if you have forgot the password.

System Handling

Software upgrade and additional features

You can upgrade the software and additional features or parameters in the handset by using the WinPDM, Device Manager or BroadWorks Device Management System. The following are examples of additional features that you can configure:

- Company phonebook
- Downloadable languages
- Customizing the menu tree

The license(s) can also be added via the **Admin** menu in the handset.

To view the handset's software version, press *#34# in the idle mode.

Handset updates via the charging rack

Whenever there are updates for the handset, you are instructed to leave the handset in a central charging rack so that the handset can be updated with new features and functions. During an update, the handset displays the cicon and the Updating handset message. You can dismiss the message by pressing **OK**.



Figure 8: Handset update while in charger

If you remove the handset from the charger to use it, the update is suspended. The update is resumed when the handset is again located into the charger.

When the update is complete, the handset displays the Handset is updated message. You can close the message by pressing **OK**.



Figure 9: Update completed while in charger

Chapter 7: Customizing Avaya Wireless Handset 3735

Settings

Sound and alert settings

Adjusting the ring volume

Procedure

- 1. Press Menu.
- 2. Select **Settings**.
- 3. Select Sound & Alerts > Volume.

Increase and decrease the volume using the left and right arrows on the navigation key.

- 4. Press **Back** to save the settings.
 - Note:

If a handset restriction is enabled, it might not be possible to set the ring signal to **Silent**.

Note:

If a handset restriction is enabled, its not possible to decrease the ring volume lower than the allowed level. If you attempt to decrease the ring volume, the <code>Volume reset</code> to the <code>lowest level allowed</code> pop-up message appears on the screen. See the handset's Configuration Manual for more information.

Setting different ring signals for calls

About this task

Use this procedure to set different ring signals for calls.

The handset has 14 different ring signals.

Procedure

1. Press Menu.

- 2. Select Settings.
- Select Sound & Alerts > Ring signals.
- 4. Select one of the following:
 - Internal call
 - External call
 - Call back
 - Priority call

You can set different signals for internal calls, external calls, callback, and priority calls.

- 5. Select the ring signal.
- 6. **(Optional)** Press **Play** to listen to a ring signal before selecting it.

The ring signal is repeated until you press **Stop**.

7. Press **Back** to save the settings.



™ Note:

Additional ring signals can be selected if they are configured in the WinPDM.

Setting alerts for messages

Procedure

- 1. Press Menu.
- Select Settings.
- 3. Select Sound & Alerts > Message alert.
- Select a message alert from the list.

Press Play to listen to a message alert before selecting it.



Note:

The Play soft key is not available for Enhanced beep. Instead, send a message to the handset to listen to the sound.

By default, the message volume follows the ring volume setting in the handset. However, you can set the message volume to be different.

5. Press **Back** to save the settings.



The option Custom sounds should be selected to create a customized message alert.

Setting the vibrator alert

Procedure

1. Press Menu.

- 2. Select Settings.
- 3. Select Sound & Alerts > Vibrator alert.
- 4. Select one of the following:
 - On
 - On if silent: The vibrator is on when the handset is muted.
 - Off
- 5. Select vibrating alert.
- 6. Press **Back** to save the settings.
 - Note:

If the vibrator is activated, it vibrates for incoming calls and messages. The vibrator can also be activated when receiving a message during a call.

Setting the key sound

Procedure

- 1. Press Menu.
- Select Settings.
- 3. Select Sound & Alerts > Key sound.
- 4. Select one of the following:
 - Silent
 - Click
 - Tone
- 5. Press **Back** to save the settings.
- 6. (Optional) Press Play to listen to a key sound before selecting it.

Keypad lock settings

The handset keypad can be locked automatically to minimize the risk of accidentally pressing keys or buttons while the handset is not in use. The keypad is automatically locked after the lock time defined by the **Auto lock time** parameter expires.

The administrator can configure the automatic key lock settings in the WinPDM or Device Manager.



You can answer or end a call while the keypad is locked. You can call any one of the five predefined emergency numbers while the keypad is locked if this feature is configured in the WinPDM or Device Manager.

The alarm button can be pressed while the keypad is locked.

The user can also configure the automatic key lock settings as described in the following sections. You can configure one of the following options for automatic key lock:

- On: Keypad is automatically locked if it is not used before the specified lock time expires.
- On except calls: The keypad is automatically locked if it is not used for the specified lock time. If the user is in a call when the auto-lock time expires, the keypad remains unlocked until the user has completed the call.
- Off: Keypad is never automatically locked.
- Auto key unlock: Keypad is automatically unlocked when a call or message is received.
 When the user has serviced the call or message, the key lock is reapplied after the specified auto-lock time expires.

The **Auto lock time** parameter specifies the time after which the keypad is automatically locked. The shortest value is five seconds and the longest is three minutes.

Activating automatic key lock

Procedure

- 1. Press Menu.
- Select Settings.
- 3. Select Locks > Automatic key lock.
- 4. Select one of the following:
 - On
 - · On except calls

The system displays the current key lock setting under **Automatic key lock**.

- 5. Press Back to redisplay the Locks menu.
- 6. Select Auto lock time, and then press Select.
- 7. Select the required lock time, and then press **Select**.

The user can configure a locked keypad to unlock automatically when a call or message is received. After the user has serviced the call or message, the keypad is locked again after the specified **Auto lock time** expires.

Deactivating automatic key lock

- 1. Press Menu.
- Select Settings.
- 3. Select Locks > Automatic key lock.
- 4. Select **Off** to deactivate automatic key lock.

Phone lock settings

The handset can be protected from unauthorized use by activating the automatic phone lock. You can configure one of the following options for automatic phone lock:

- On: The handset is automatically locked if it is not used before the specified auto-lock time expires, or when it is first turned on. The auto-lock time is specified in the **Auto lock time** parameter.
- On in charger: The handset is locked immediately when located in the charger.

When removed from the charger and unlocked by the PIN, the handset remains unlocked.

• Off: The handset is never locked.

You can change the default phone lock PIN code ("0000") to a code of your choice. The code should be of minimum four digits and maximum eight digits.

The **Auto lock time** parameter specifies the time after which the handset is automatically locked. The shortest value is five seconds and the longest is three minutes.



If this feature is configured in the **WinPDM** or **Device Manager**, you can call any one of the five predefined emergency numbers while the handset is locked.

Activating automatic phone lock

Procedure

- 1 Press **Menu**
- 2. Select Settings.
- 3. Select Locks > Phone lock > Auto phone lock.
- 4. Select one of the following:
 - On
 - On in charger
- 5. Enter a PIN code of your choice, and then press **OK**.

The code should be of minimum four digits and maximum eight digits.



If you forget the PIN code, it can be reset by your distributor.

- 6. Press Back.
- 7. Select **Auto lock time**, and then select the required lock time.

Deactivating automatic phone lock

Procedure

1. Press Menu.

- 2. Select Settings.
- 3. Select Locks > Phone lock > Auto phone lock.
- 4. Select Off.
- 5. Enter the PIN code, and then press **OK** to deactivate automatic phone lock.
 - Note:

If you forgot the PIN code, it can be reset by your administrator.

Changing the PIN code

Procedure

- 1. Press **Menu**.
- 2. Select **Settings**.
- 3. Select Locks > Phone lock > Change PIN code.
- 4. Select Off.
- 5. Enter the old PIN code, and then press **OK**.
 - Note:

If you forget the PIN code, it can be reset by your administrator.

6. Enter the new PIN code again, and then press **Save**.

Display settings

Changing the screen saver

About this task

You can set the screen saver to one of the following:

- Information: Displays status and identification information while the handset is idle.
- Black: The screen is black when the handset is idle.
- Black also in call: The screen is black when a call is in progress.

When the handset with the screen saver set to **Information** is in a charger, the Owner ID is displayed even if the handset is switched off. This simplifies identification when many handsets are in a charging rack.

- 1. Press Menu.
- 2. Select **Settings**.
- 3. Select **Display > Screen saver**.

- 4. Select one of the following:
 - Information
 - Black
 - · Black also in call
- 5. Press Back.

Changing brightness

Procedure

- 1. Press Menu.
- 2. Select **Settings**.
- 3. Select **Display > Brightness**.
- 4. Select one of the following:
 - Normal
 - Power save
- 5. Press Select.
- 6. Press Back.

Inverting text display

Procedure

- 1. Press Menu.
- 2. Select Settings.
- 3. Select **Display**.
- 4. Select Rotate display text.
- 5. Select any of the following:
 - Normal
 - Inverted
- 6. Press Back.

Setting the font style

- 1. Press Menu.
- 2. Select Settings.
- 3. Select **Display**.
- 4. Select Font style.

- 5. Select one of the following:
 - Normal
 - Bold
- 6. Press Back.

Time and date settings

The Avaya Wireless Base Station 3700 is responsible for providing the correct time to the handset. You cannot change the time and date displayed on the handset, you may only change the format.

The handset also synchronizes with the base station time when:

- The handset is turned off and then turned on. The handset requests the base station for the current date and time.
- The handset is turned on for longer than 24 hours. The handset requests the current time every 24 hours from the time it was last turned on.

Setting the time format

Procedure

- 1. Press Menu.
- 2. Select **Settings**.
- 3. Select Time & Date.
- 4. Select the time format. The options are:
 - 12:00 (AM/PM)
 - 24:00
- 5. Press **Select** to save the settings.

Setting the date format

- 1. Press Menu.
- 2. Select Settings.
- Select Time & Date.
- 4. Select the date format. The options are:
 - DD/MM/YYYY, for example, 17/09/2016 (also called Europe)
 - MM/DD/YYYY, for example, 9/17/2016 (also called US)
 - YYYY-MM-DD, for example, 2016-09-17 (ISO 8601)
 - MMM DD YYYY, for example, Sep 17 2016

- DD MMM YY, for example, 17 Sep 16
- DD.MM.YYYY, for example, 17.09.2016
- DD-MM-YYYY, for example, 17-09-2016
- 5. Press **Select** to save the settings.

Call answering settings

The default setting for the handset is to use the **Off-hook** key to answer a call. However, the handset can be configured to answer the call automatically, that is, without pressing a key and in loudspeaking mode if required. Other keys can also be setup to answer a call. If **Any key** is selected, any key, except the **On-hook** key and the **Sound off** key, can be used to answer a call.

Setting the call answering key

Procedure

- Press Menu.
- 2. Select **Settings**.
- 3. Select Answering > Answering key.
- 4. Select any of the following:
 - Call key
 - Any key
- 5. Press **Back** to save the settings.

Setting the call answering behavior

Procedure

- 1. Press Menu.
- 2. Select Settings.
- 3. Select Answering > Answer behavior.
- 4. Select any of the following:
 - Automatically
 - Loudspeaking
- 5. Press **Change** to change the setting.

The check box is selected.

- 6. Press **Back** to save the settings.
- 7. **(Optional)** To remove the settings, press **Change**.

The check box is cleared.

Alarm settings

Editing the alarm data

Procedure

- 1. Press Menu.
- 2. Select Settings.
- 3. Select Alarm > Edit alarm data.
- Enter the alarm data.
- 5. Press Save.



™ Note:

You can send certain information (for example, a handset's location) along with an alarm. You can configure a shortcut to this menu option if you use it frequently.

Other settings

Changing the text size for messages

Procedure

- 1. Press Menu.
- 2. Select Settings.
- 3. Select Messages > Text size Normal.

The default text size is **Normal**.

- 4. Select any of the following:
 - Normal
 - Large

Changing the menu language

Procedure

- 1. Press Menu.
- 2. Select Settings.
- 3. Select Language.
- 4. Select the language that you want to use for the menu.
- 5. Press **Back** to save the settings.



An additional language can be downloaded using the WinPDM or Device Manager.

Setting the Owner ID

About this task

Use this procedure to set the **Owner ID** to identify the handset.

- 1. Press Menu.
- 2. Select Settings.
- 3. Select Owner ID.
- 4. Enter the name or identity.
- 5. Press Save.

Chapter 8: Maintenance

Maintenance

Maintenance of Batteries

Battery Warnings



The "Low battery" icon () is displayed when the battery has 10% or less remaining capacity left. In addition; a warning signal sounds every minute, and the system displays the message "Battery low. Charge now.".



The "Empty battery" () icon is flashing when the battery has 5% or less remaining capacity left. In addition; a warning signal sounds every second, and the system displays the message Battery empty. Shutting down.

During a call, only the corresponding battery warning signal notifies the user. The warning signal cannot be silenced during a call. When not in call, the warning signal is silenced by pressing the

Sound off (# ¾) key or



Charge the Battery

Place the handset in the desktop charger or in the rackmount charger.

Push the handset into the charger to fully insert it.

To remove the handset from the charger, tilt the handset towards you and lift it upwards.

Note:

It is not recommended to lift the handset upwards before tilting it forward.

The system displays an animated battery icon — indicating charging by starting with its current charge and ending with the full charge. A filled battery icon — indicates a fully charged battery.

Note:

Only use the prescribed chargers for charging.

Charge Spare Batteries

Spare batteries can be charged with a separate battery pack charger. It can charge six batteries at the same time.



Caution:

It is not permitted to charge intrinsically safe batteries using the battery pack charger.

Replace the Battery

If the standby time for the handset becomes to short, the battery should be replaced with a new one. For information about new batteries, please contact your system administrator or your supplier. The battery is attached to the rear side of the battery door. It is designed in such a way that the battery may only be inserted in the correct orientation.

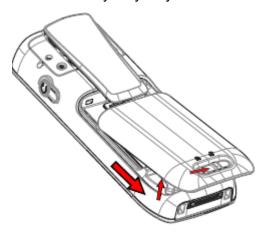


Figure 10: Replaceable battery

Easy Replacement of Handset

Easy replacement can be used if a handset needs to be replaced due to, for example, a broken display.

The easy replacement procedure is done via the handset display and the DC4 Advanced Desktop Charger, or the CR3 Charging Rack.



Note:

Easy replacement is not supported when using DP1 Desktop Programmer.

The following settings are replaced during easy replacement:

- DECT registration
- User parameters (including User ID)
- Contacts
- The extension number is assigned to the new handset.

The following settings are not replaced during the easy replacement:

Call list

Messages

Starting Easy Replacement Procedure

About this task

This task suggests necessary requirements before starting easy replacement procedure.

The easy replacement procedure is done via DC4 Advanced Desktop Charger, or the DC3 Charging Rack.



Easy replacement is not supported when using DP1 Desktop Programmer.

Procedure

- 1. Check that both the old handset to be replaced and the new replacement handset are of the same device type.
- 2. Use the WinPDM or the Device Manager to check that the software of DC4 Advanced Desktop Charger or CR3 Charging Rack is of version 1.3.x or greater.
- 3. Make sure that the handset batteries are charged before starting the easy replacement procedure.
- 4. Switch off the new handset by long pressing

Easy Replacement Procedure

About this task

Important:

Never remove a handset from the charger until the instructions in the display tells you to do so. If there is an error indication it may be allowed to remove the handset. After the old handset has been placed in the charger, the new handset must be placed in the charger regardless if the replacement was successful or not. Failing to do so may result in malfunction and the new handset will need to be sent for service.

- 1. On the new handset, press and hold ...
 - Do not release until you are instructed to do so.
- 2. Put the new handset in the charger.
- When the system displays the message "Start phone replacement?", release .
 Press Yes (left soft key).
 - The system displays the message "Follow the instructions. Each step can take several minutes.".
- 4. Press **OK** (left soft key).

5. When the text "Please insert old phone in charger" is displayed, replace the new handset with the old handset. The handset can either be switched on or off.

If the CR3 Charging Rack is used, the left charging slot must be used for both handsets.

The handset restarts and after a few seconds, the system displays a message "Saving settings. Do not remove phone from charger". It may take several minutes.

Important:

If the old handset cannot communicate with the charger, put the new handset in the charger to restore its settings (the handset's IPDI). If this step is not performed, the new handset must be sent for service. The settings of the old handset can be transferred to the new handset by using PDM or Device Manager.

6. When the system displays the message "Please insert new phone in charger", replace the old handset with the new handset.

The system displays the message "Restoring settings".

Important:

Do not remove the handset while the message "Restoring settings" is displayed.

7. When the system displays the message "Phone successfully replaced. Please remove phone to restart", remove the handset from the charger.

The handset automatically restarts.

Attach the hinge-type clip

Attach the hinge-type belt clip as described in the illustration.

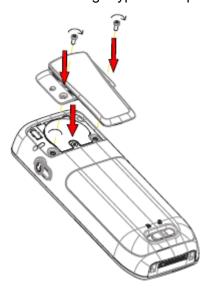


Figure 11: Screw the hinge-type clip into position

Attach the swivel-type clip

Attach the swivel-type belt clip as described in the illustration.

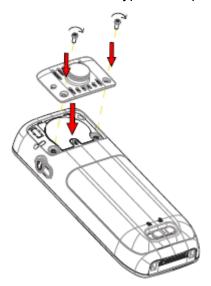


Figure 12: Screw the swivel-type clip into position

Attach cover for no clip

Attach the enclosed cover as described in the illustration when no clip is to be used.

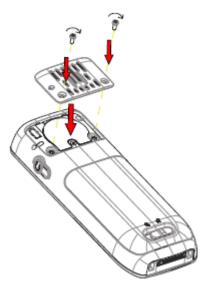


Figure 13: Screw the cover into position

Chapter 9: Energy efficiency

Recommendations on how to save energy:

- Do not charge a battery when the ambient room temperature is above +40° C or below +5° C (above 104° F or below 41° F). Charging below +5° C harms the battery and shorten the lifetime.
- Note that storing Li-lon batteries at high temperature dramatically reduces its capacity. For example storage around +60° C reduces capacity with 20% in less than a month, permanently.
- Set the handset screen saver to the **Black also in call** option. The screen goes black and the backlight is turned off. The backlight also turns off when the handset is in call. This helps to extend the battery life when the user is on an extended call.
- The handset can be configured to switch off when located in the charger. When removed from the charger the handset switches on automatically.
- If the charger is not used for a longer period of time, remove the power adapter to the charger.
- Do not put the handset in charger when charging is not required.

Chapter 10: Related Resources

Documentation

You can download the documents you need from the Avaya Support website at http://support.avaya.com/.

Installation and Operation

Title	Description	Audience
Installation and Operational Manual		Deployment engineers, solution architects, and support personnel.
	Handset 3700 Series phones.	, , , , ,

Configuration

Title	Description	Audience
Avaya Wireless Handset 3735 Configuration Manual	Describes the design, capacity, interoperability, and limitations of the Avaya Wireless Handset 3700 Series handsets.	Sales and deployment engineers, solution architects, and support personnel.

Appendix A: Safety Precautions

Safe operation

For safe and efficient operation of the handset, observe the guidelines given in this manual and all necessary safety precautions when using the handset. Follow the operating instructions and adhere to all warnings and safety precautions located on the product, the Regulatory Information delivered with the handset, and this User Manual. Do not disassemble the handset. Disassembling the handset voids the warranty.

The handset contains no user serviceable components. Service should be performed by an Authorized Service Center only. Changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment Frequency Range.

The handset is a radio transmitter and receiver. When it is on, it receives and sends out radio frequency (RF) energy. The handset operates on different frequency ranges depending on market and employs commonly used modulation techniques:

EU (ETSI): 1880-1900 MHz/250mW

USA/Canada (FCC): 1920-1930 MHz/100mW



Note:

Product Designator for regulatory purposes of the Avaya Avaya Wireless Handset 3735 is DH7.

Regulatory Compliance Statements (EU and EFTA)

Exposure to radio frequency signals

	Close to ear	Handheld/body mounted
DH7-xxxx	0.075 W/kg (10g)	0.076 W/kg (10g)

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international quidelines. These quidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 W/kg averaged over 10 grams of tissue.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.201 W/kg and at the body is 0.278 W/kg (The measure distance of 1.5 cm). Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

Regulatory Compliance Statements (USA and Canada only)

FCC ID:

DH7-xBxx:BXZDH7BT

DH7-xDxx:BXZDH7BT

DH7-xAxx:BXZDH7

IC:

DH7-xBxx:3724B-DH7BT
DH7-xDxx:3724B-DH7BT
DH7-xAxx:3724B-DH7

Related links

<u>FCC and IC compliance statements</u> on page 123 <u>Exposure to radio frequency signals</u> on page 124

FCC and IC compliance statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antennas.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

Note:

Privacy of communications may not be ensured when using this handset.

Related links

Regulatory Compliance Statements (USA and Canada only) on page 123

Exposure to radio frequency signals

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with FCC SAR limit of 1.6 W/kg. The maximum SAR value measured is:

	Head	Body
DH7-xxxx	0.042 W/kg	0.074 W/kg

The handset is designed to be worn with the display towards the body for best radio performance. SAR testing is made with no separation, to approve the device to be carried close to the body. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Use of non-Avaya approved accessories may violate the FCC and IC guidelines for RF exposure and should be avoided.

Related links

Regulatory Compliance Statements (USA and Canada only) on page 123

Precautions

Handset

- Avoid volume levels that may be harmful to your hearing. Exposure to excessive sound pressure from a handset's earpiece or headset may cause permanent hearing loss.
- Low volume levels might result in missed alerts.
- Only use the handset in temperatures between: -5 °C and +45 °C (23 °F and 113 °F).
- Avoid exposing the handset to direct sunlight, heat sources and moisture.
- Do not place a cold handset in a charger.
- If the handset has been exposed to water or condense, remove the battery immediately, and let it dry completely before re-inserting the battery.

- Do not expose the handset to open flame.
- Protect your handset from abrasive liquids and vapors.
- Remove the handset from the charger before cleaning the handset to reduce risk of electric shock.
- Keep the handset away from strong electromagnetic fields.
- The handset may retain small metal objects around the earpiece region.
- Do not place heavy objects on the handset.
- Do not allow children to play with the product packaging material. This could cause choking and or suffocation.
- Do not allow children to play with the handset. It is not a toy.

Battery

- Do not immerse the battery into water. This could short-circuit and damage the battery.
- Do not expose the battery to an open flame. This could cause the battery to explode.
- Do not allow the metal contacts on the battery to touch another metal object. This could short-circuit and damage the battery.
- Do not leave the battery where it could be subjected to extremely high temperatures, such as inside a car on a hot day.
- Use the Desktop Charger, the Charging Rack, or the Battery Pack Charger for charging. Charge the battery for at least one hour the first time you use the battery.
- Do not charge the battery when the ambient room temperature is above 40 °C or below 5 °C (above 104 °F or below 41 °F).
- Do not attempt to take the battery apart.
- Do not remove the battery, unless it needs to be replaced.
- Power off the handset before removing the battery.

Note:

Defective batteries must be returned to a collection point for chemical waste disposal.

Glossary

Device Manager An application for the management of handsets and charging racks.

Integrated Wireless Messaging and

Services

to and from handsets and chargers.

Portable Device Manager

An application for the management of portable devices and charging racks. Also known as WinPDM.

A software that runs on an Elise3 hardware and enables wireless services

Unite Connectivity Manager

A unit module that manages users, communication interfaces, message routing, activity logging, and essential messaging services.

Index

Special Characters	alarm data	440
mossage indication	editing alarm operation	
_message indication repetition	•	
repetition	91 answering answering a call	
	answering a call	
Numerics	answering cansanswering text message	<u>55</u>
07051	prodefined massage	56
3735 handsets	audible signal off	
introduction	audible signal on	
373x		
keys and buttons	automatic call	
373x wireless handset	6 C W L	<u></u>
icons	activating	68
	automatic key lock	<u>00</u>
A	activating	107
	deactivating	
Absence handling	automatic phone lock	<u>107</u>
Absence settings	deactivating	100
Absence settings	64	<u>100</u>
accepting		
message	<u>61</u> B	
PTT invitation		
incoming call <u>60</u>	batteries	<u>115</u>
rejecting	battery	
message	precautions	<u>125</u>
accessing	battery pack	
templates	86 charger	<u>20</u>
accessories		<u>70</u>
373x wireless handset	4 11:	<u>70</u>
acoustic location	DI441-	<u>43</u>
acoustic signal	alia a la lina a	<u>44</u>
activating	enabling	<u>44</u>
alarm	Bluetooth connection	<u>44</u>
activating <u>95</u>	Bluetooth headset	
automatic callback	connecting	
automatic key lock1		<u>45</u>
profile	ma ma a 1 / a	<u>46</u>
Activating automatic phone lock		<u>49</u>
adding	wearing	<u>43</u>
My favorites	g ₂ by name	
new contact		<u>79</u>
Adding	by number	
contact from the call list	searching	79
Adding a new profile		
additional In Call functions	-	
adjusting	3 <u>7</u> C	
ring volume10	04 call	60
adjusting volume		
during call		<u>90</u>
admin menu		440
alarm	setting	<u>112</u>
location information		440
with data	96 setting	<u>112</u>

Call answering settings	<u>112</u>	ring signal (continued)	
Call list	<u>57</u>	editing	<u>77</u>
call procedure	<u>96</u>	ring signal	
call services		setting	<u>78</u>
call services	<u>63</u>	contact from the call list	
diverting	<u>64</u>	adding	<u>77</u>
Call services		contacts	
Absence handling	<u>63</u>	menu operation	<u>30</u>
call waiting	<u>70</u> , <u>71</u>	menu tree	<u>30</u>
callback		number	
activating	<u>68</u>	calling	<u>73</u>
calling		Contacts	
contact		calling a contact from the central phone book	<u>74</u>
local or company phonebook		deleting a contact	<u>78</u>
different party	<u>85</u>	CR3	
emergency	<u>65</u>	charging rack	<u>19</u>
message sender	<u>84</u>	customizing	
number		menu tree	<u>37</u>
contacts			
number in a message		D	
push-to-talk group			
reading		data	
text message		sending	<u>72</u>
Calling a contact from the central phonebook	<u>74</u>	date format	
calls		setting	<u>111</u>
answer a call		DC3 Desktop Charger	
ending		DP1 Desktop Programmer	<u>19</u>
incoming		deactivating	
menu operation		Absence settings	<u>64</u>
menu tree		automatic key lock	<u>107</u>
central phonebook overview	<u>78</u>	automatic phone lock	<u>108</u>
change		declining	
history	<u>10</u>	calls	<u>55</u>
changing		PTT invitation	<u>62</u>
headset profile		Declining a call with a predefined message	<u>56</u>
menu language		defining	
PIN code		soft keys	<u>80</u>
system		defining handset	
text size for messages		actions	
the screen saver		in call	
Changing brightness		in charger	<u>53</u>
changing the name of Bluetooth headset		not in call	<u>53</u>
charger list clear	<u>99</u>	Defining hot keys	<u>80</u>
charging rack	40	Defining navigation keys	<u>81</u>
CR3	<u>19</u>	Defining the multifunction button	<u>81</u>
checking	00	deleting	
voicemail inbox		message	
clearing lists		My favorites	<u>83</u>
Color messaging		profile	<u>95</u>
conference call		Deleting a contact	
configuration	<u>121</u>	Deleting entries from the call list	<u>58</u>
configuring	00	dialing	
PTT call	<u>62</u>	number	
connecting		headset button	<u>75</u>
Bluetooth headset		number from the call list	
connections	<u>34</u>	pre-programmed number	<u>75</u>
contact		dialling	

last called number (continued) last called number		G	
	75	group coll	
headset number	<u>/5</u>	group call	co
different party	0.5	push-to-talk	<u>60</u>
calling	<u>85</u>		
disabling	4.4	Н	
Bluetooth	<u>44</u>		
Display settings		handset	
changing brightness	<u>110</u>	description	<u>16</u>
diversion of calls		easy replacement	<u>116</u>
stopping	<u>65</u>	logging off	<u>39</u>
diverting		parts	<u>16</u>
calls on no reply		precautions	<u>124</u>
calls when busy		subscribing	<u>51</u>
external calls		handset off	
internal calls	<u>64</u>	switching	38
documentation	<u>121</u>	handset on	
DP1 Desktop Programmer		switching	38
DC3 Desktop Charger	<u>19</u>	Handset updates via the charging rack	
DTMF	<u>71</u>	headset button	
		number	
E		dialing	75
E		headset is turned off	
easy replacement	117	headset number	<u>50</u>
easy replacement procedure		last called number	
editing	<u>117</u>	dialling	75
alarm data	113	headset profile	<u>70</u>
My favorites		changing	46
new contact		headsets	
		ileauseis	
profile Editing a number from the call list	<u>95</u>		
enabling			
Bluetooth	<u>44</u>	icons	
ending	47 50 70	373x wireless handset	
call		menu	<u>24</u>
energy efficiency	<u>120</u>	identifying standard handset	
Enhanced messaging	04	handset without Bluetooth	
color messaging		in call	<u>35</u>
message priority and call priority		action	
message queuing and message priority		in charger	
error or warning messages	<u>100</u>	defining handset	<u>53</u>
exposure	400 404	incoming call	
radio frequency signals	<u>122, 124</u>	PTT invitation	
		accepting	<u>60</u>
F		Incoming call	
•		declining a call	<u>56</u>
features		declining a call with a predefined message	
introduction	12	incoming calls	
font style	_	answer	<u>55</u>
setting	110	incorrect PIN	
forwarding	<u></u>	installation	
message	84	interactive	
sent message		messaging	90
functions		international call	<u></u>
wireless handset 3735	16	making	7/
Will Globb Hariaset 07 00	<u>10</u>	introduction to Bluetooth	
		inverting	<u>ro</u>

inverting (continued)		Menu operations	
text display	<u>110</u>	call list	<u>57</u>
		contacts	<u>76</u>
K		profiles	<u>94</u>
N.		shortcuts	80
key sound		menu tree	
setting	106	customizing	<u>37</u>
keypad	<u>100</u>	message	
locking	40	accepting	
locking during a call		rejecting	89
unlockingunlocking		deleting	84
unlocking during a call		forwarding	
		opening	
Keypad lock settings		PTT invitation	
activating automatic phone lock	<u>108</u>	accepting	61
keys and buttons	0.5	receive	
373x	<u>25</u>	template	
		message list	
L		Message priority and call priority	
_		Message queuing and message priority	
last search result			<u>09</u>
viewing	<mark>79</mark>	message sender	0.4
legal notices		caling	<u>04</u>
local call		messaging	00
making	74	interactive	<u>90</u>
local or company phonebook		Messaging	00
contact		reviewing inbox content while reading a message	e <u>89</u>
calling	73	mobile data	
location information	<u>ro</u>	sending	
alarm	96	mute ringtone for incoming call	
locking	<u>30</u>	mute ringtone for message	<u>42</u>
handset	11	muting ringtone	<u>42</u>
		My favorites	<u>33</u>
log in a shared phone		adding	<u>82</u>
log out of a shared phone	<u>30</u>	deleting	<u>83</u>
logging		editing	<u>82</u>
handset	00		
logging	<u>39</u>	N	
logging off	00	IN	
handset	<u>39</u>	New branding	
		Avaya IP-DECT solution	11
M		new call	
•••		starting	67
maintenance	115		
handset	117–119	transferring	<u>69</u>
hinge clip		new contact	70
no clip		adding	<u>76</u>
replacement		new messages	
swivel clip		writing	<u>87</u>
maintenance of batteries		not in call	
making	<u>110</u>	action	
call	17	in charger	
international call		defining handset	<u>53</u>
		number from the call list	
local call	<u>/4</u>	dialing	<u>75</u>
menu	00	number in a message	
messaging	<u>32</u>	calling	8 5
menu language	445	saving	
changing	113	•	

0	radio frequency signals (continued)
	exposure <u>122,</u> <u>124</u>
one key	reading
voicemail access <u>93</u>	sent message <u>88</u>
open contacts during call <u>66</u>	stored message <u>83</u>
opening	receiving
message <u>66</u>	message <u>88</u>
opening contacts <u>66</u>	voicemail <u>93</u>
operation	redisplaying message
operation notice	continuing with the call92
operational problems <u>99</u>	rejoining
out of battery <u>50</u>	push-to-talk group <u>63</u>
Owner ID	removing
setting	headset <u>46</u>
	renaming
P	system <u>52</u>
r	repetition
pairing	message indication91
Bluetooth headset45	replacement
pairing fails50	replacement procedure
pairing mode50	replying
. •	sender83
Phone lock settings	Reviewing inbox content while reading a message89
handset	ring signals for calls
PIN code	setting <u>104</u>
	ring volume
changing	adjusting104
pre-programmed number	<u></u>
dialing	
precautions	S
battery	
handset	saving
prefix	number in a message
mobile data	Saving a number from the call list <u>58</u>
sending <u>92</u>	screen saver
priority	changing <u>109</u>
setting <u>53</u>	searching
procedure	by name <u>79</u>
procedure call96	by number <u>79</u>
profile	selecting
activating94	Bluetooth headset <u>45</u>
deleting95	sender
profiles	replying <u>83</u>
menu operation31	sending
menu tree <u>31</u>	data <u>72</u>
Profiles <u>94</u>	mobile data
adding a new profile94	prefix <u>92</u>
PTT call	Sending a message from the call list <u>58</u>
configuring <u>62</u>	sent message
PTT invitation	forwarding <u>88</u>
declining <u>62</u>	reading <u>88</u>
push-to-talk group	setting
calling	call answering behavior
rejoining <u>63</u>	call answering key <u>112</u>
-	date format <u>111</u>
Ь	font style
R	key sound
radio frequency signals	Owner ID
Tadio Troquettoy signals	

ring signal (continued)	text message	
priority	<u>53</u> reading	
ring signal	calling <u>85</u>	
contact <u>78</u>	8 text size for messages	
ring signals for calls		. 113
time format		
vibrator alert		111
Setting alerts for messages		
settings		
Settings	new call	
call answering settings		<u>03</u>
		40
keypad lock settings		
phone lock settings		
shortcuts		<u>39</u>
Shortcuts		
defining hot keys		<u>3, 67</u>
defining navigation keys		
defining the multifunction button	<u>81</u> U	
soft keys	O	
defining	80 unlocking	
Software upgrade and additional features	<u>102</u> handset	/11
Sound and alert settings	unsubscribing	<u>71</u>
setting alerts for messages	105	5 2
starting	CO Gyddin	
new call	use loudspeaker	
status indications	— using loudspeaker	<u>/2</u>
system profile	Using the call list	
	doloting onthe on the oan not	
stopping	editing a number from the call list	
diversion of calls	<u>65</u> saving a number from the call list	<u>58</u>
stored message	sending a message from the call list	<u>58</u>
reading	····. <u>83</u> viewing the time of a call	<u>60</u>
subscribing		
handset	<u>51</u>	
switching	V	
corded	. ilauatan alaut	
headset <u>49</u>	yibrator alert	405
handset off	setting	105
handset on	wiewing	
system	last search result	<u>79</u>
renaming	52 missed calls	
unsubscribing	52 viewing <u>59</u>	
System handling	···· JE Viewing the time of a call	<u>60</u>
handset updates via the charging rack	102 voicemail	
		<u>93</u>
software upgrade and additional features	voicemail access	
system profile	one key	93
status indications	90 voicemail inhox	
system profiles	<u>97</u> checking	93
	volume	
Т	adjusting during a call48	3 66
•	aujusung dunng a ban <u>40</u>	<u>,, uu</u>
template		
message	86 W	
templates		
accessing	86 wearing	
	Bluetooth headset	<u>43</u>
testing	wireless handset 373x	
alarm	accessories	<u>20</u>
testing	U	

with data	
alarm	<u>96</u>
writing	
new messages	<u>87</u>